



WARRANTY

Register your product within 30 days of purchase to activate your one-year limited manufacturer's warranty at [ovente.com/register](https://www.ovente.com/register)

WARRANTY IS ONLY VALID IF YOU REGISTER WITHIN 30 DAYS AFTER PURCHASE.

LIMITED ONE (1) YEAR WARRANTY

Your product has a one (1) year warranty period starting on the date of purchase from an authorized retailer. In the event that the product is defective, please contact us to arrange for a replacement. This warranty only covers defects in workmanship and materials. The warranty does not include damage due to misuse, commercial use, accidents, or natural wear and tear.

LIMITATIONS

The warranty stated above is the only warranty applicable to this product. Other expressed or implied warranties are hereby disclaimed. No verbal or written information given by the Manufacturer, its agents or employees shall create a guarantee or in any way increase the scope and duration of this warranty. Repair or replacement as provided under this warranty is the exclusive remedy of the consumer. The manufacturer shall not be liable for incidental or consequential damages resulting from the use of this product. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the applicable warranty period set forth above except to the extent prohibited by law. Consumer rights may vary from state to state.

Customer Service: (855) 926-2626

Visit us at [ovente.com](https://www.ovente.com)



Facebook.com/ovente



@OventeTweets



@Ovente

OVENTE®

Portable Ceramic Infrared Cooktop Burner BG44 Series



Before using please read the instruction manual and keep it for future use.

Cool Touch Portable Ceramic Infrared Cooktop Burner

This Ovente Portable Ceramic Infrared Cooktop provides the best in cooktop performance. Heats up and cools down faster than conventional cooking ranges. It is fast, energy efficient, safe to use and easy to clean. It features multiple settings that make it easy to serve food at the ideal temperature. You can use it as a stylish, elegant centerpiece on the table, for outdoor parties and in the kitchen as an extra cooking zone.

- Elegant Durable Ceramic Infrared Cooktop perfect for everyday use or entertaining
- 12 temperature levels; 5 programmable timer levels; Faster cooking with even heat, no hot or cold spots; Hot surface caution light
- Works with all types of cookware including glass and aluminum and heats cookware efficiently with minimal heat loss
- Outside surface remains cool to touch even while cooking; 120V, 1200 Watt power; 46" power cord
- Made with high-quality ceramic glass top surface

- Make sure that the bottom of the cookware does not scrape across the surface of the ceramic field, although a scratched surface does not impair the use of the device.
- Make sure that the device was properly cleaned before storing it in a dry place. No user serviceable parts inside. Repair should be done by authorized service personnel only.

The Code of Fault

Reasons	Code
thermocouple cutting-out	E1
thermocouple opening	E2
problem with the fan	E3
thermistors opening	E4
thermistors cutting-out	E5
over-heating inner cooker	E6
relay cutting-out	E7
relay opening	E8
the inner temperature is out of control	E9

If you see error codes on above chart, please call our Customer Service: (855) 926-2626



TECHNICAL SPECIFICATIONS

Input Voltage: 120V

Power: 1200W

Hertz: 60Hz

1. **LOCK:** To activate the child lock, press the  key. Press the key  and  the when is not in use. To deactivate, press the  key.
2. Do not remove the plug from the socket when you just finish using the appliance. Softly touch  to turn the appliance OFF. About eight or ten minutes later, you can remove the plug. The inner fan will still work to eliminate heating for safety purposes. Put a pot with 35~71oz water on the cooker, if you want to bring down the temperature quickly. This way it can also avoid burning your hands.

Attention: The appliance will be shut automatically if it is not used in two hours.



COOKTOP MAINTENANCE

- Unplug the power plug prior to cleaning the device. Do not use any caustic cleaning agents and make sure that no water penetrates the device.
- After cool down, wipe off the ceramic field with a damp cloth or use a mild, non-abrasive soap solution.
- Wipe off the casing and the operating panel with a soft cloth or a mild detergent.
- Do not use any petrol products to not damage the plastic parts and the casing/operating panel.
- Do not use any flammable, acidy or alkaline materials or substances near the device, as this may reduce the service life of the device and lead to deflagration when the device is turned on.



IMPORTANT SAFEGUARDS

When using your cooktop, basic safety precautions should always be followed, including the following:


- Read all instructions carefully before use.
- Provide close supervision when the burner is being used near children.
- Do not submerge the cooktop unit or electrical cord in liquid, touch the unit with wet hands, or use in a wet outdoor environment.
- Do not use the cooktop when the cooktop surface is cracked.
- Do not operate if the electrical cord is frayed or if wires are exposed.
- Do not let the electrical cord hang over the edge of a table or countertop.
- To disconnect, turn the control OFF, then remove the plug from wall outlet.
- Do not touch the cooktop surface for several minutes after using as it will be hot.
- Do not move the cooktop while cooking or with hot cookware on the cooktop surface.
- Place the hot plate in a clean and flat surface when using, keep the cooktop away from walls above 3.9in. There are four insulation pads in the bottom of the cooker, to make sure there is enough space for heat elimination from the bottom of the cooker.
- Do not place on or near a hot gas, electric burner or in a heated oven.
- Do not use the appliance for other than its intended use. Do not use outdoors.
- Before plugging in the appliance, check that the socket and power matched those of the appliance. Attention shall be paid to whether the rated value of input supply voltage is according to that of rated input value or not.
- Do not use without a pot on the heating surface or it may lead to internal damage.


- Always remove the plug from the socket when the hot plate is not in use. Allow it to cool before putting or taking parts off. Do not touch or insert the plug with wet hands to avoid electric shock.
- The hot plate is a cooker with high thermal efficiency. The highest temperature of the plate is 570°F.
- Never put plastic foils, paper or other inflammable objects on the cooker or cover the plate exhaustively with metallic foil.
- Keep the cooktop out of the reach of children. Do not leave children unsupervised with the cooktop.
- This appliance should not be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have are supervised by the person who is responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
-  The center surface gets extremely hot; refrain from touching the appliance.



USING THE COOKTOP

Please turn ON the switch at the side panel.

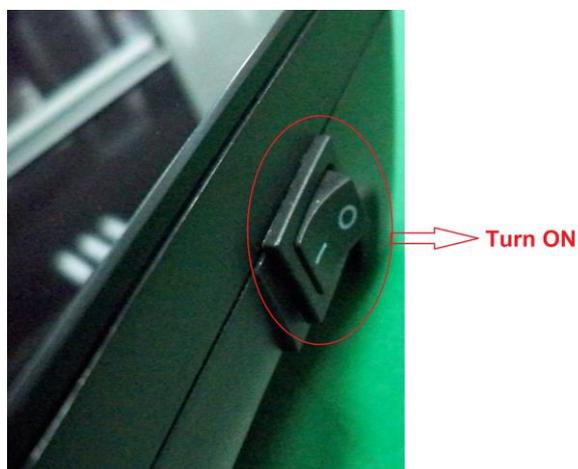

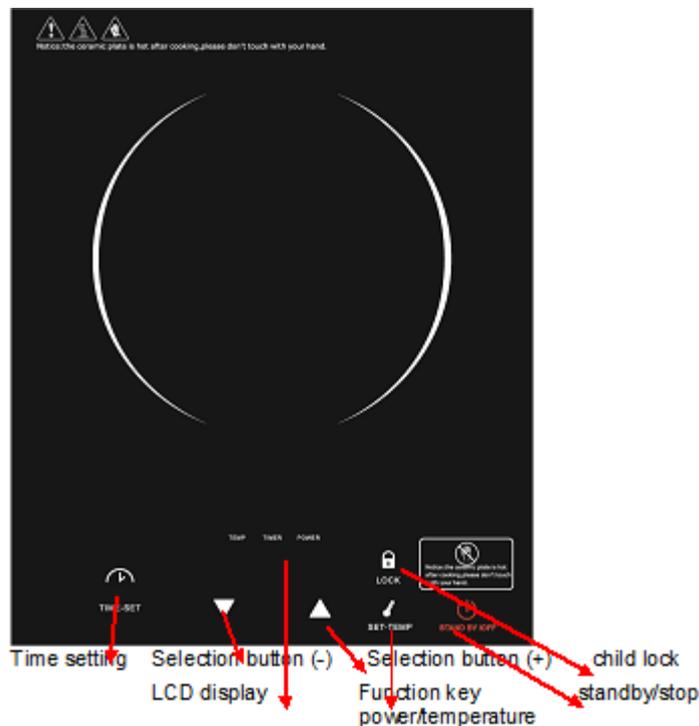

1. **POWER-ON:** Make sure to connect the appliance to a suitable socket and turn ON. There will be a buzzer sound that will indicate that the connection is correct.

Note: The appliance's power is ON without heating.

2. **STAND BY/OFF:** Press the key  for more than 1.5 seconds when the buzzer sounds press the  the digital will display "P1", in this time, the appliance starts to heat. When the hot plate is working, it can be shut by pressing the key .
3. **UP, DOWN:** The default setting for heating at first is gear 1. Press the key  or  to adjust gears. The digital screen will display "P1~P12". In order to see the actual temperature, press Set-Temp.
4. **SET-TEMP:** Press the key , the gears and temperature will change automatically when it is working. Under the setting TEMP mode, press the key  or  to adjust the temperature.
5. **TIME SET:** Press the key  to set the time. It will add five minutes when you press . It will deduct one minute when you press . The time will flash ten seconds and Begin counting. When the time is done, the hot plate will shut off automatically.