



## WARRANTY

Register your product within 30 days of purchase to activate its one-year limited manufacturer's warranty at [ovente.com/register](https://www.ovente.com/register)

**WARRANTY IS ONLY VALID IF YOU REGISTERED WITHIN 30 DAYS AFTER PURCHASE.**

### LIMITED ONE (1) YEAR WARRANTY

Your product has a one (1) year warranty period from the date of purchase from an authorized retailer. In the event that the product is defective, feel free to contact us to arrange for a replacement. This warranty only covers defects in workmanship and materials. The warranty does not include damage due to abuse or misuse, any commercial use or accidents.

### LIMITATIONS

The warranty stated above is the only warranty applicable to this product. Other expressed or implied warranties are hereby disclaimed. No verbal or written information given by the Manufacturer, its agents or employees shall create a guarantee or in any way increase the scope and duration of this warranty. Repair or replacement as provided under this warranty is the exclusive remedy of the consumer. The manufacturer shall not be liable for incidental or consequential damages resulting from the use of this product. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the applicable warranty period set forth above except to the extent prohibited by law. Consumer rights may vary from state to state.

**Customer Support: [ovente.com/support](https://www.ovente.com/support)**

**Visit us at [ovente.com](https://www.ovente.com)**



[Facebook.com/ovente](https://www.facebook.com/ovente)



[@OventeTweets](https://twitter.com/OventeTweets)



[@Ovente](https://www.instagram.com/Ovente)

# OVENTE®

## Easy Open Electric Can Opener C036 Series



Before using please read the instruction manual and keep it for future use.

# Easy Open Electric Can Opener

 
Ovente Easy Open electric can opener has the ability of opening various types of cans in just few seconds. With the power of one touch on the button, it already operates and opens the can seamlessly. With the Ovente Easy open electric can opener, no more sharp edges from the lid of the cans. It easily cuts it and instead of providing a crook, sharp and dangerous lids - the electric can opener leaves the lid with smooth edges. The opener maneuvers around the 360-degree lid in a rotary motion.

## FEATURES

- Easy Open can opener can easily open any can size with the touch of a button
- No more sharp edges as it already eradicates the sharp edges of the can and makes it more safer to handle
- Very fast & convenient to use, Locks and hold the can in position for easy one hand operation
- Built-in magnet in the opener that attracts the can's lid - no need to use your hand
- Can opener automatically rotates around the 360-degree lid, Powered by 4 x AA batteries (not included)



Easily open the any can size with a touch of a button

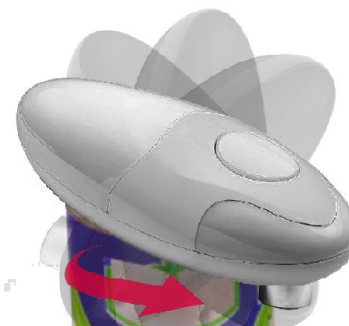

Can Opener automatically rotates 360-Degree lid



No more sharp edges and makes it safer to handle


**DIFFERENT COLORS AVAILABLE AT OVENTE.COM**



 Available in two stylish colors: Red and White


5

Let the can opener to make a 360-degree rotation and then press the ON/OFF button for a full stop.

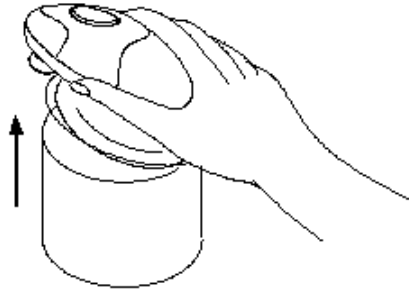


6

 For convenience, the built-in magnet can be used to pick up the lid from the can.

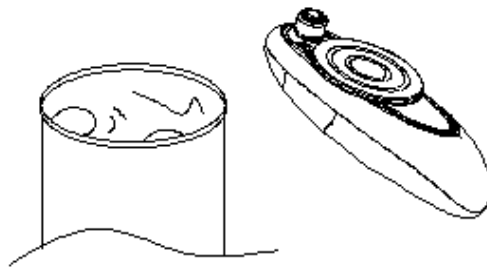

## CAN OPENER MAINTENANCE

 - If the can opener slows during cutting, this may indicate low battery level and the batteries should be replaced.
- Wipe with damp cloth or a sponge using a mild non-abrasive cleaner and dry with cloth completely.

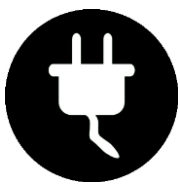

## ELECTRICAL REQUIREMENTS

Model: CO36

Battery: 4\*AA

 


## **IMPORTANT SAFEGUARDS**

*When using your can opener, basic safety precautions should always be followed, including the following:*

- Read all instructions carefully before using the can opener.
- Provide close supervision when this can opener is being used near children or disabled persons.
- Do not open cans of flammable liquids such as lighter fluids.
- Make sure that the motor is stopped completely before opening the battery compartment case.
- Avoid contact with moving parts. Keep hands, hair, jewelry, clothing, etc. away from moving parts during operation to prevent any injury or damage to the can opener.
- Please make sure that only alkaline batteries are used.
- The blade is sharp, be careful when using it.
- Remove the batteries in order to not damage the product if it will not be used for quite some time.
- The opener can only be cleaned with a wet towel. Do not wash it with under the water or with other liquid.
- Do not clean the opener in a dishwasher.

## CAN OPENER PARTS

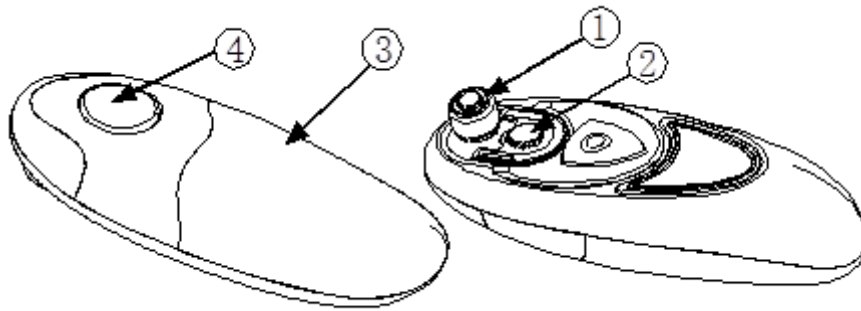


1. Blade
2. Metal Gear
3. Battery Compartment
4. ON/OFF Button



## USING THE CAN OPENER

 - 1 Insert 4\*AA batteries according to the right poles.


**Note:** Make sure to always check the polarity of the battery as it might affect operation sometimes.

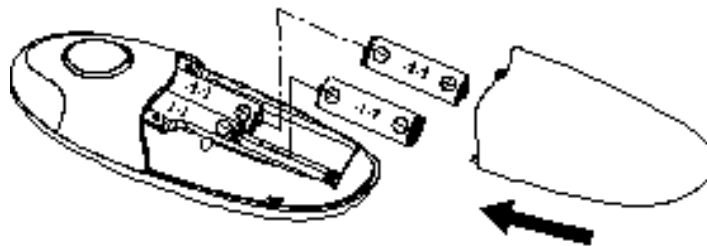

2

Place the can opener on the edge of the can between the blade and the gear.

 Note: The can opener has a built-in magnet that securely attaches the can opener on the can's lid.

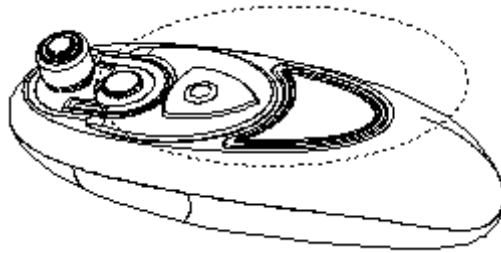

3

Securely latch the can opener downwards on to the can's lid.



4

Press the ON/OFF button for a second and release once it starts to cut.

