



## WARRANTY

**Register your product within 30 days of purchase to activate its one-year limited manufacturer's warranty at [ovente.com/register](https://www.ovente.com/register)**

**WARRANTY IS ONLY VALID IF YOU REGISTERED WITHIN 30 DAYS AFTER PURCHASE.**

### **LIMITED ONE (1) YEAR WARRANTY**

Your product has a one (1) year warranty period from the date of purchase from an authorized retailer. In the event that the product is defective, feel free to contact us to arrange for a replacement. This warranty only covers defects in workmanship and materials. The warranty does not include damage due to abuse or misuse, any commercial use or accidents.

### **LIMITATIONS**

The warranty stated above is the only warranty applicable to this product. Other expressed or implied warranties are hereby disclaimed. No verbal or written information given by the Manufacturer, its agents or employees shall create a guarantee or in any way increase the scope and duration of this warranty. Repair or replacement as provided under this warranty is the exclusive remedy of the consumer. The manufacturer shall not be liable for incidental or consequential damages resulting from the use of this product. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the applicable warranty period set forth above except to the extent prohibited by law. Consumer rights may vary from state to state.

**Customer Service: (855) 926-2626**

**Visit us at [ovente.com](https://www.ovente.com)**



Facebook.com/ovente



@OventeTweets



@Ovente

# OVENTE®

## Automatic Electric Milk Frother and Warmer FR2008 Series



Before using please read the instruction manual and keep it for future use.

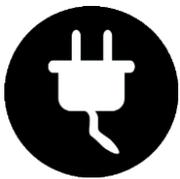




## MILK FROTHER MAINTENANCE

*Unless clearly specified in the cleaning instructions below, please note that none of the parts of this appliance are dishwasher safe:*

- Always switch the appliance off at the wall socket and unplug before cleaning.
- Always clean the milk frother immediately after use so that food residues do not dry onto it.
- Remove the whisk wash them thoroughly in warm, soapy water. Be sure to dry them thoroughly before storage. Do not place the whisks or any part of the frother in the dishwasher. Always store the whisks in a safe place out of reach of children.
- Wash the inside of the lid and container with warm, soapy water.
- Wipe the outside of the base, lid and container with a well-wrung cloth.
- Never make use of sharp edges, scrubbing brushes or any abrasive materials on the milk Frother. Do not use abrasive cleaners on the exterior or interior of the frother. This could Scratch the stainless steel exterior and damage the non-stick surfaces on the interior.
- Ensure the appliance is clean and dry before storage.



## ELECTRICAL REQUIREMENTS

**Voltage:** 120V

**Power:** 600W

**Hertz:** 60Hz

## Hot Chocolate



- Ovente Milk Frother
- 0.55oz cocoa powder
- 4fl oz semi-skimmed milk or skimmed milk
- Sugar (optional)
- 8.8fl oz cup

Pour the milk in the frother and then add the cocoa powder (optionally add the sugar). Select the heating button on the milk frother. Pour the mixture into the cup. As a serving suggestion, accompany with biscuits.

*\*Increased amount of milk will make this drink more liquid.*

## **Automatic Electric Milk Frother and Heater**

The Ovente FR2008 Series is a comfortable ergonomically designed high-class brushed stainless steel design automatic electric milk frother and heater that looks great on any kitchen or countertops. The detachable mug for easy filling, pouring and serving and comes with a non-stick coating interior for easy cleaning. Make the perfect froth for your favorite hot or cold latte, cappuccino, hot chocolate, even heat baby's milk and much more. With 14oz/400ml heating capacity and 7oz/200ml frothing capacity that completes your daily caffeine ritual at a touch of a button. The milk frother has a magnetically driven technology and magnetic frothing disk provides perfect froth without a fuss. Automatic shut-off function which automatically shuts off the milk frother when turned on and there is no water in the carafe.



## IMPORTANT SAFEGUARDS

*When using your milk frother, basic safety precautions should always be followed, including the following:*

- Read all instructions carefully before use.
- Before plugging in the appliance, check that the socket and power matched those of the appliance. Attention shall be paid to whether the rated value of input supply voltage is according to that of rated input value or not.
- **WARNING!** Never immerse an electrical appliance or any part of the cord or plug in any liquids including water. Electrical connections should never be exposed to water due to the risk of electric shock or electrical fire. Never operate with wet hands.
- Do not make use of an extension cord with this electrical appliance.
- Do not let the electrical cord hang over the edge of a table or countertop.
- Do not damage the cord with sharp edges or heat. Additionally, do not bend, smash or strain the cord, in order to avoid damage.
- If the power cord or the plug has become damaged, do not operate the appliance and avoid picking it up.
- Keep the milk frother out of the reach of children. Do not leave children unsupervised with the milk frother.
- This appliance should not be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are supervised by the person who is responsible for their safety.
- Do not use accessories or attachments not recommended by the Ovente as it may cause damage to the unit and a risk of personal injury.

## Latte Macchiato



- Ovente Milk Frother
- 1.76fl oz semi-skimmed milk or skimmed milk
- Sugar (optional)
- 7.74fl oz cup

Pour the milk in the frother (optionally add the sugar) and select the heating button. Serve with the creamy milk in the cup and pour carefully the coffee over the creamy milk. Garnish with chocolate, cinnamon, and another topping to suit your imagination... And enjoy!

# RECIPES

## Cappuccino



- Ovente Milk Frother
- 1.76fl oz semi-skimmed milk or skimmed milk
- Sugar (optional)
- 7.74fl oz cup

Pour the milk in the frother (optionally add the sugar) and select the heating button. Serve with an espresso cup then add the cream, carefully, covering the espresso coffee. Garnish with chocolate, cinnamon, and another topping to suit your imagination... And enjoy!

- Do not use the appliance after a malfunction or if it has been dropped or damaged.
- Extreme caution must be observed when moving an appliance with hot contents.
- Do not operate this appliance when it is empty.
- After each use, unplug the appliance and only clean the appliance when no power is running through it.
- To disconnect, be sure that the milk frother is off and gently pull the plug from the wall outlet. Do not unplug by pulling the cord itself.
- This is not a commercial appliance. It should only be used for household purposes and should be only be used in indoor conditions.
- The milk frother should be used on flat, even surfaces.
- Do not use of this device on a wood surface of any type could result from damage of that surface.
- Do not cover any part of the Milk Frother with a cloth or similar, it will cause overheating and the risk of fire.
- The first time you use your Milk Frother there may be a slight odor given off. This is normal and is just the manufacturing residues burning off.
- Do not overfill your Milk Frother as this may cause liquids to spill out onto your work surface or enter the base unit.
- Do not use outdoors.
- If you accidentally spill fluids onto the base, turn it upside down and leave to dry for several hours. Do not use until all traces of the liquid have disappeared. The danger of electric shock or fire.

# MILK FROTHER PARTS



1. Detachable Stainless Steel Carafe

2. Magnetic Heating Base

3. Cold Froth

4. Hot Froth

5. Lid

6. Heat Resistant Cup Holder

7. Hot Chocolate

8. Milk Frothing/Stirring Whisk

9. Milk Heating Whisk

## **HINTS AND TIPS FOR YOUR MILK FROTHER**

- If adding the frothed milk to a hot drink, prepare the beverage, such as coffee or hot chocolate while the frother is in use. Serve immediately for best flavor.
- The frother can froth milk without heating. The frother is not capable of cooling milk.
- When using the heat setting, the frother will heat the milk to the ideal temperature for your coffee or hot chocolate without making it too hot to drink right away. Your beverage will not have to sit or cool down before you can drink it.
- Do not allow children to play with the whisks. They could be lost or damaged.
- Whisks could cause injury to children and should be stored out of child reach for safety.
- If you use the milk frother with powdered milk, hot chocolate, etc make sure to clean the frother properly.

## Hot Chocolate

- Add milk to the container. Do not add milk more than the maximum capacity.
- Place the carafe on the heating base.
- Connect the plug to the power socket.
- Press the hot chocolate button ensuring that the LED light are lit. Add the chocolate powder little by little.



- Close the lid on the mug and make sure it is sealed.
- When temperature is reached, whisk will automatically stop.
- To stop operation, press the lit button again or lift the carafe from the heating base.
- After use, unplug the plug from the power socket.

### NOTE:

- All buttons will flash when the carafe is not placed on the heating base.**
- Do not insert chocolate pieces or tablets. The recommended preparation of hot chocolate is 4fl oz milk and 0.05oz chocolate powder.**



## USING THE MILK FROTHER

Before using for the first time, or after prolonged storage without use, wash any parts that will come into contact with food.

 
 
### Assembly

The milk frother comes with 2 different whisks. One of these is for frothing/stirring milk and the other is for heating milk.

- The milk frothing/stirring whisk includes a BPA Free plastic housing with a metal spiral ring.
- The milk heating whisk is slightly smaller and is made from BPA Free plastic housing.

Follow the proper instructions for heating or frothing milk with the proper whisk.

### Instructions

Whisk	Function	Max. capacity
	Frothing Only, Stirring Only and Frothing and Heating	7oz/200 ml
	Heating and Blending	14oz/400ml

- Based on instructions under assembly, choose the correct whisk and set it within the milk mug.

## Cold Froth Function

- Add milk to the container. Do not add milk more than the maximum capacity.
- Close the lid on the mug and make sure it is sealed.
- Place the carafe on the heating base.
- Connect the plug to the power socket.
- Press the cold froth button ensuring that the LED light are lit. Press again the frothing button to switch off the milk frother.



- When temperature is reached, whisk will automatically stop.
- To stop operation, press the lit button again or lift the carafe from the heating base.
- After use, unplug the plug from the power socket.

## Hot Froth Function

- Add milk to the container. Do not add milk more than the maximum capacity.
- Close the lid on the mug and make sure it is sealed.
- Place the carafe on the heating base.
- Connect the plug to the power socket.
- Press the hot froth button ensuring that the LED light are lit. Press again the button to switch off the milk frother.



- When temperature is reached, whisk will automatically stop.
- To stop operation, press the lit button again or lift the carafe from the heating base.
- After use, unplug the plug from the power socket.