

17-9-6
152.4x101.6mm
150G铜版纸



ROBUST STAINLESS STEEL IMMERSION
HAND BLENDER
HS580 SERIES

Before use, please read this manual thoroughly and save for future reference.

ovente.com



ROBUST STAINLESS STEEL IMMERSION
HAND BLENDER
HS580 SERIES

OVENTE

2

ovente.com

ROBUST STAINLESS STEEL IMMERSION HAND BLENDER
HS580 SERIES

TABLE OF CONTENTS

ITEM INFORMATION	4
IMPORTANT SAFEGUARDS	5
PARTS & FEATURES	6
USING YOUR HAND BLENDER	8
CARE & MAINTENANCE	9

ROBUST STAINLESS STEEL IMMERSION HAND BLENDER
HS580 SERIES

Ovente introduces the Robust Slim Stick Hand Blender, which provides you with the best blending performance along with the most versatile and useful attachments for your everyday needs. Be your very own healthy chef and make delicious and healthy meals and drinks that suit your lifestyle perfectly.

Powered by 300 Watts, this hand blender instantly blends and crushes your fresh, healthy ingredients in no time, transforming them into the healthiest and the most delicious meals created in your very own home. Two blending speeds from low to high with a pulse activated sensor easily adjusts and creates a perfect texture and consistency for your blended meals and drinks. The ergonomically-designed stainless steel body is non-slip, comfortable, and easy to grip.

FEATURES

- 300 Watts of motor power instantly blend and create delicious and healthy smoothies, pureed soups, marinades and sauces—just the way you want it.
- Pulse activated sensor with two blending speeds from Low to High give your favorite blended dishes your desired texture and consistency.
- Slim Stick design fits most mixing bowls, pots, beakers, etc.
- Ergonomic handle is designed to prevent slippage while giving you more grip and control.

OVENTE

4

ovente.com

IMPORTANT SAFEGUARDS

When using this hand blender, basic safety precautions should always be followed, including the following:

- **READ ALL INSTRUCTIONS.**
- To protect against electrical shock, do not put the motor body, cord, or electrical plug of this hand blender in water or other liquids. Only the detachable blending shaft and specific parts of this appliance have been designed for immersion into water or other liquids. Never submerge any other portion of this unit. If hand blender falls into liquid, immediately unplug it. Carefully remove the blending shaft, clean, and dry unit thoroughly before continuing.
- This appliance is not intended for persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not allow children to use the blender without supervision.
- Avoid contact with moving parts.
- Do not use outdoors or for purposes other than intended uses.
- During operation, keep hands, hair, clothing, and utensils away from attachments and any mixing container to reduce risk of injury to persons and/or damage to the appliance.
- Remove detachable shaft from the blender before washing the blades or shaft.
- Blades are SHARP. Handle carefully when removing, inserting, or cleaning.
- When mixing liquids, especially hot liquids, use a tall container or make small quantities at a time to reduce spillage, splattering, and possibility of injury from burning.
- The cream should come out of the refrigerator just before whipping. Whipped cream may be used at either soft or firm peaks depending on preference. It may be flavored as desired. For best results, whip cream just before using.
- To unplug, grasp plug and pull from electrical outlet. Never pull cord.
- Before cleaning and putting on and taking off attachments, make sure the appliance is off, unplugged from the outlet, and that the motor has stopped completely.

PARTS & FEATURES

- PULSE ACTIVATED SENSOR WITH TWO BLENDING SPEED**
Slow to High for a perfect texture and consistency of your favorite dishes that is perfect for your healthy lifestyle
- COMFORT HANDLE**
The handle allows easy and comfortable control over the blender
- MOTOR BODY HOUSING**
The powerful 300-watt motor operates with an easy one-touch control
- DETACHABLE SHAFT**
Shaft release button removes shaft for easy

USING YOUR MULTI-PURPOSE HAND BLENDER

SALSA
Blend fresh chopped tomatoes, onion, garlic and cilantro perfect for summer parties!

SOUP
Prepare delicious pureed soups, from cauliflower, butternut squash, to a warm tomato soup!

SMOOTHIE
Blend your favorite nutritious fruits and veggies for a fresh yummy smoothie!

PASTRY
Mix all your necessary baking ingredients easily and with more precise control thanks to the Hand Blender!

BLENDING TIPS

- ★ Be sure that the shaft is fully submerged before blending ingredients to prevent splatter.
- ★ To puree a soup, use the hand blender to blend the soup ingredients to the desired consistency by using a gentle up-and-down motion right inside the saucepan or pot.
- ★ When blending ingredients right inside a pot or pan, tilt the pan away from you to create a deeper area for blending to prevent splatter.
- ★ When blending into the blending beaker—for example when making a fruit Smoothie—cut most solid foods into ½-1 inch pieces for easy blending.
- ★ The hand blender is perfect for frothing milk for cappuccino or lattes. Just warm milk in a small saucepan, and then pulse the hand blender gently, being sure to keep the shaft fully submerged.
- ★ Do not let hand blender sit in a hot pot on a stove while not in use.

CAUTION: DO NOT PUT FINGERS NEAR BLADE. TO DISLodge FOOD, UNPLUG HAND BLENDER FROM THE OUTLET FIRST.

HAND BLENDER CARE & MAINTENANCE

- Before cleaning, unplug the appliance and detach the accessories.
- Wipe the motor unit, the chopper coupling unit, and the whisk coupling unit with a clean, damp cloth (not included).
- Do not immerse the hand blender and its accessories into the water.
- If food is not easily rinsed off the blade or whisk, place a drop of dish detergent in the mixing container with water. Plug cord into the outlet, immerse the blade end portion or whisk, then operate the unit for about 10 seconds. Unplug, rinse under running water, and then dry thoroughly.
- When not in use, keep this appliance in a dry and well-ventilated area.

ELECTRICAL REQUIREMENTS

Model	HS580	Rotational Speed	21000RPM
Rated Voltage	110-120V	Rated Frequency	60Hz
Rated Power	300W	Model Depense Patent Pending	—
Rated Working Time	≤1min	Rated Interval Time	≥1min



ROBUST STAINLESS STEEL IMMERSION
HAND BLENDER
HS580 SERIES

OVENTE WARRANTY

Register your product within 30 days of purchase to activate its one-year limited manufacturer's warranty at ovente.com/register

NOTE: WARRANTY IS ONLY VALID IF YOU REGISTERED WITHIN 30 DAYS AFTER PURCHASE.

LIMITED ONE (1) YEAR WARRANTY:
Your product has a one (1) year warranty period from the date of purchase from an authorized retailer. In the event that the product is defective, feel free to contact us to arrange for a replacement. This warranty only covers defects in workmanship and materials. The warranty does not include damage due to abuse or misuse, any commercial use, or accidents.

LIMITATIONS
The warranty stated above is the only warranty applicable to this product. Other expressed or implied warranties are hereby disclaimed. No verbal or written information given by the manufacturer, its agents, or employees shall create a guarantee or in any way increase the scope and duration of this warranty. Repair or replacement as provided under this warranty is the exclusive remedy of the consumer. The manufacturer shall not be liable for incidental or consequential damages resulting from the use of this product. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the applicable warranty period set forth above except to the extent prohibited by law. Consumer rights may vary from state to state.

Customer Support: ovente.com/support
Visit us at ovente.com

Facebook.com/ovente | @OventeTweets | @Ovente

ovente.com

OVENTE
Defining Homewares