

**OVENTE®**

PREMIUM ELECTRIC  
**CONCOCTION MAKER**  
ICR2037 SERIES



*Before use, please read this manual thoroughly and save for future reference.*

[ovente.com](http://ovente.com)



PREMIUM ELECTRIC  
**CONCOCTION MAKER**  
ICR2037 SERIES



# PREMIUM ELECTRIC CONCOCTION MAKER

ICR2037 SERIES

## TABLE OF CONTENTS

IMPORTANT SAFETY	. . . . .	4
PARTS AND FEATURES	. . . . .	5
USING YOUR CONCOCTION MAKER	. . . . .	7-8
CARE & MAINTENANCE	. . . . .	9



# IMPORTANT SAFEGUARDS

When using this concoction maker, basic safety precautions should always be followed, including the following:

Read all instructions carefully before using the concoction maker.

- ⚠ Before connecting the appliance, please check if the voltage indicated on the bottom of the appliance in accordance with the power outlet voltage in your home.
- ⚠ Do not operate the concoction maker with a damaged cord or plug. Stop using if it malfunctions. If the main cord was damaged in any manner, please contact your service provider.
- ⚠ To protect against the risk of electric shock, do not immerse the concoction maker in water or in any other liquids.
- ⚠ Do not let the cord hang over the edge of the work surface or come into contact with a hot surface.
- ⚠ To avoid circuit overload, do not operate another high voltage appliance on the same circuit.
- ⚠ Appliance should always be used on a dry and level surface.
- ⚠ Do not place the appliance on or near a hot gas or electric burner.

- ⚠ Close supervision is necessary when the item is used near children. This product is not intended to be used by children.
- ⚠ Do not operate the appliance without water as it may damage the heating element, if this problem occurs immediately unplug the appliance and allow it to cool down then pour water.
- ⚠ Avoid contact with moving parts.
- ⚠ The use of attachments not recommended by Ovente may cause fire, electric shock, or injury.
- ⚠ Do not use outdoors.
- ⚠ Unplug the steamer from the socket when the appliance is not in use or before cleaning. Never place fingers or other utensils into feed or discharge areas.
- ⚠ Check ice hopper for presence of foreign objects before using.
- ⚠ Blades are sharp, handle carefully.



# PARTS & FEATURES



**TWO SHAVING SETTINGS**  
Produce snow or slush ice textures

**37 OZ CAPACITY WITH MEASUREMENT MARKINGS**  
Make your favorite treats/drinks in minutes

**ANTI-SKID FEET**  
For extra safety and stability

**ICE SHAVING CHAMBER**  
Lets you shave ice and blend batches of frozen drinks

**MIXING PADDLE**  
Simultaneously stirs ice and drink for a perfectly mixed drinks

**CORD STORAGE**  
Convenient and tidy storing

# PREMIUM ELECTRIC CONCOCTION MAKER

## ICR2037 SERIES



### SLUSHIES

For a refreshing, sweet summer treat, mix any of your favorite juices, pour over the shaved ice, then garnish with fresh fruit if you like! Put this on top of a scoop of ice cream for a delicious, creamy addition.



### SNOW CONES

Perfect for a hot summer day, snow cones have been a favorite icy treat for decades - especially for kids. If you want to avoid artificial flavorings or food dyes, make your own colorful syrup by boiling mashed fruit, strain, then pour over ice.



### MARGARITA

Margaritas are popular cocktails due to their fresh, crisp, and fruity flavors that mix superbly with tequila. They're easily customizable, and with crushed ice instead of cubes, it's even better! Just remember to dip your moistened rim into salt first for the perfect salty/sour/sweet combination.



### DAIQUIRIS

Tangy, sweet, refreshing, and well-balanced, Daiquiris are classic cocktails that are very simple to create. Just shave some ice, then add some fresh citrus juice, rum, sugar, flavored syrup, and mix. Garnish with a lime wheel.





# USING YOUR CONCOCTION MAKER

1 Make sure the unit is unplugged. Always place the unit on a clean, dry surface.

2 Place Ice Shaving Chamber in the main body and ensure that it is seated on the shaft.

3 Twist the shaft in the direction of the arrow to lock into position.

4 Place the Mixing Paddle in bowl.

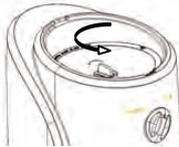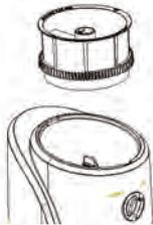

5 If mixing shaved ice with other ingredients, place ingredients into the bowl.

NOTE: Use the serving size markings as a guide for appropriate ice and liquid levels. For a large or small serving, fill the ice and liquid to the level indicated on the bowl.


6 Slide Bowl into the groove on Main body, push it up and turn clockwise until it is fully locked. This will allow the Mixing Paddle to mix ice and ingredients once operation begins.





# USING YOUR CONCOCTION MAKER

- 7 Turn the Selector knob to your desired setting. Fine setting produces finer ice, Coarse Cone setting produces coarser ice.
- 8 Place ice inside Ice Shaving Chamber. Do not shave ice above MAX line.
- 9 Plug cord into a power outlet.
- 10 Place Lid on Main body and turn counterclockwise to engage the interlock switch (Power On/Off). The unit will start and begin to shave ice.

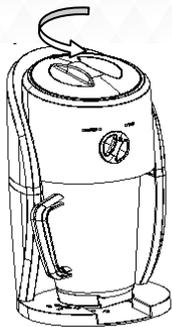

## WARNING - Cut Hazard

Avoid contact with Shaving Blade.

Do not use if Shaving Blade is loose, cracked, bent, or damaged.

Turn Lid clockwise to stop.

To remove Bowl, turn counterclockwise, slide out, and serve.

For best results, use ice that has been out of the freezer between 10 to 15 minutes

## The Best Margarita Recipe

Amount: 3 drinks


Ingredients	3 Drinks	
	fl oz	ml
Margaritaville® Gold Tequila	4	120
Triple Sec	1	30
Lime Juice	2	60
Orange Juice	2	60
Margaritaville® Margarita Mix	4	120



# CONCOCTION MAKER CARE & MAINTENANCE

- Unplug the appliance from the outlet and allow it to cool down completely before cleaning.

- To remove the Ice Shaving Chamber, twist the shaft in the direction of the arrow to lock into position and lift to remove.

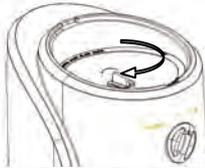

- Do not use any chemical abrasives to clean appliance.
- The Concoction Maker should not be immersed in water.
- Rinse with soap and warm water the Lid, Blending Jar and Shaving paddle and allow it to air dry.
- Use a damp cloth to clean the outside of the unit.



## ELECTRICAL REQUIREMENTS

Voltage : 120V

Power: 45W

Hertz: 60Hz

**OVENTE®**

PREMIUM ELECTRIC  
**CONCOCTION MAKER**  
ICR2037 SERIES





# OVENTE WARRANTY

Register your product within 30 days of purchase to activate its one-year limited manufacturer's warranty at  
**[ovente.com/register](https://ovente.com/register)**

**NOTE: WARRANTY IS ONLY VALID IF YOU REGISTERED WITHIN 30 DAYS AFTER PURCHASE.**

## LIMITED ONE (1) YEAR WARRANTY:

Your product has a one (1) year warranty period from the date of purchase from an authorized retailer. In the event that the product is defective, feel free to contact us to arrange for a replacement. This warranty only covers defects in workmanship and materials. The warranty does not include damage due to abuse or misuse, any commercial use, or accidents.

## LIMITATIONS

The warranty stated above is the only warranty applicable to this product. Other expressed or implied warranties are hereby disclaimed. No verbal or written information given by the manufacturer, its agents, or employees shall create a guarantee or in any way increase the scope and duration of this warranty. Repair or replacement as provided under this warranty is the exclusive remedy of the consumer. The manufacturer shall not be liable for incidental or consequential damages resulting from the use of this product. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the applicable warranty period set forth above except to the extent prohibited by law. Consumer rights may vary from state to state.

**Customer Support: [ovente.com/support](https://ovente.com/support)**  
**Visit us at [ovente.com](https://ovente.com)**



[Facebook.com/ovente](https://Facebook.com/ovente)



[@oventeTweets](https://twitter.com/oventeTweets)



[@Ovente](https://www.instagram.com/Ovente)

[ovente.com](https://ovente.com)

**OVENTE®**

*Defining Housewares*