

# OVENTE®

## Electric 700W Juice Extractor JE7607 Series



Before using please read the instruction manual and keep it for future.

[ovente.com](http://ovente.com)

## **BEFORE FIRST USE**

Your appliance has been packaged carefully to ensure the product reaches you in good condition. If the product has been damaged, dropped, has a malfunction in any way, or if the supply cord is damaged, immediately contact your retailer for replacement or repair.

Carefully unpack your appliance. Make sure you do not discard any packaging material until all parts of the appliance have been found.

Carefully wipe the exterior of the appliance to remove any dust that may have accumulated. Dry with a dry towel. Do not use harsh abrasive cleaners. Remove any label or sticker.

Wash the accessories (plunger, feeding tube, lid, filter, juice collector) in warm soapy water, dry with a dry towel.

**WARNING!** Do not immerse the motor part of this appliance in water or any other liquids.

## **PACKAGE CONTENTS**

- 1 Juicer
- 1 Pulp container
- 1 Fruit and vegetable pusher
- 1 Lid with feeding tube
- 1 Removable filter
- 1 Instruction manual



## IMPORTANT SAFEGUARDS

*When using juice extractor, basic safety precautions should always be followed, including the following:*

1. Carefully read these instructions before using your appliance.
2. **VERY IMPORTANT:** Do not immerse in water or other liquids or use near washbasins or sinks any part of the motor assembly. Ensure that the appliance base does not get wet (water splashes etc.) and do not operate it with wet hands.
3. Safely dispose of plastic bags and other components of the packaging. They may be potentially dangerous to children.
4. **WARNING!** Do not leave the appliance unattended whilst in use.
5. Unplug from mains outlet when appliance is not in use.
6. Do not use the appliance when dropped or damaged.
7. Do not permit the mains lead to come in contact with hot objects.
8. If the supply cord is damaged, contact your service provider immediately in order to avoid a hazard.
9. Always fully unwind any cord to avoid overheating.
10. **CAUTION:** Keep out of reach of children. This appliance is not intended for persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
11. Use this appliance only for its intended use. Use only Genuine attachments supplied by Ovente.
12. This appliance is intended for household use only and not for commercial or industrial use.
13. The appliance should not be used outdoors, placed near a hot gas or electrical burner or placed in a heated oven.

14. **WARNING!** Do not let the cord hang over the edge of any table or counter. There is risk of injury.
15. Do not carry the appliance by the cord or yank the cord to disconnect it from the mains supply. Disconnect by first switching off the outlet, grasping the plug and pulling it out gently.
16. **WARNING!** An appliance should never be left unattended when plugged in.
17. **WARNING!** Ensure adequate ventilation; keep an open space of approximately 20 cm all around the appliance.
18. **WARNING!** Do not use the appliance near flammable materials such as curtains, or other combustible material.
19. If appliance is to be used by a third party, please supply the instruction manual with it.
20. Switch off the appliance and disconnect from supply before changing accessories approaching parts that move in use.
21. No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling.

## **SERVICE AND STORAGE**

This appliance has been lubricated at production and requires no further lubrication. Do not attempt to service this appliance.

The first time this appliance is operated there may be a small amount of smoke or odour. This is normal. It is due to the protective coating placed on the internal components of the appliance to protect them during shipping.

Store the appliance, accessories and manual together in a dry safe place.

 
## USING THE JUICE EXTRACTOR

Always place the appliance on a level non-slippery stable surface. Connect the power supply cord plug to a suitable mains supply 120V ~ wall socket.

Note: This appliance has been designed for short term use only. Do not operate the juicer for periods longer than 40 seconds at a time when juicing heavy loads, allow sufficient time to cool between uses.

## JUICE EXTRACTOR PARTS

- A. Plunger**
- B. Feeding Tube**
- C. Lid**
- D. Filter**
- E. Juice Collector**
- F. Driving Shaft**  
(do not remove)
- G. Motor Unit**
- H. Spout**
- I. Control Knob**
- J. Clamps**
- K. Pulp Container**

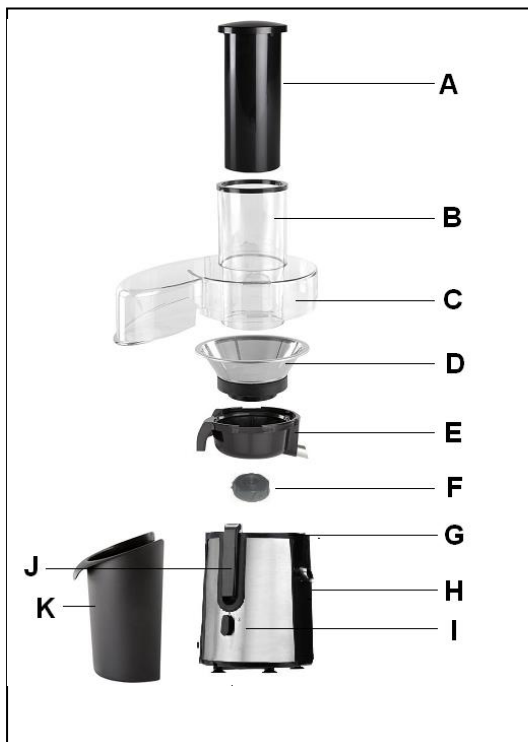

## PREPARING FOR USE

 
1. Ensure your glass or pitcher sits under the spout to collect the juice.
2. Place the pulp container into the appliance by tilting it forwards slightly. Insert the top end first and then push down the bottom end.



3. Place the juice collector into the appliance. Make sure the rim is flush with the motor unit.





- Put the filter in the juice collector. Ensure the filter is fitted securely onto the driving shaft. The blade should sit below the rim of the pulp container when in place.
- Hold the lid over the filter and lower it into position.

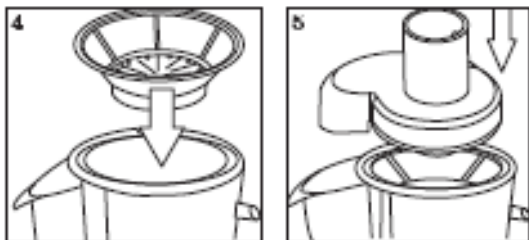

- Snap the two clamps onto the lid to lock it in place (you will hear a click noise). Note. Ensure that both clamps are secured properly.
- Slide the pusher into the feeding tray by aligning the groove in the pusher with the small protrusion on the inside of the feeding tube.



  - Control Knob. Off (O) – Low (1) – High (2)
- For oversized pieces wash and cut into smaller sizes.

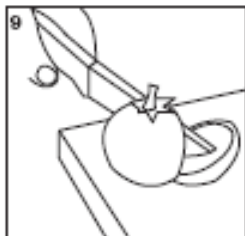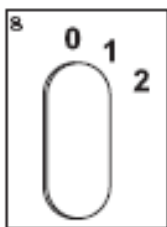

10. Place ingredients into the feeding tube and gently press downwards into the rotating filter with the pusher. Do not exert too much pressure. Once all the ingredients have been processed switch the appliance off and wait until the appliance has stopped completely.



**Note:** The juicer will only function if it is assembled correctly and the lid is locked.





## TIPS FOR USING YOUR JUICE EXTRACTOR

Use fresh fruit and vegetables only, as they contain more juice. Pineapples, beetroots, celery, apples, cucumbers, carrots, melons, tomatoes, oranges and grapes are particularly suitable.

- You do not need to remove thin peels or skins. Only thick peels, e.g. oranges, pineapples and uncooked beetroots need to be removed.
- Always remove the white pith of citrus fruits as it has a bitter taste.
- When preparing apple juice remember that the thickness depends upon the kind of apple you are using. The juicier the apple, the thinner the juice. Apple juice turns brown very quickly. You can slow this process down by adding a few drops of lemon juice.
- Fruits that contain starch, such as bananas, avocados, figs are not suitable for processing in the juicer. Use a blender or food processor for these before adding to the juicer.
- Leaves and leaf stalks, e.g. lettuce, can be processed in the juicer.



## RECIPES

Squeezed juices are an easy yet refreshing way to stay healthy and increase your daily intake of fruits and vegetables.

- Wash all ingredients before use
- Remove all stalks, pith, thick skins and seeds before juicing
- We recommend that you use only fresh fruits and vegetables
- Push the plunger slowly to extract the maximum amount of juice

- Do not pour liquids through the juicer.
- Do not use over ripe fruits and vegetables
- Do not freeze juices for more than one month
- Leave in refrigerator for no longer than one day. After this period
- they may become sour



### **Tomato Juice**

Juice 3.lbs of fresh ripe tomatoes, serve immediately.

To spice add a few stalks of celery leaves and fresh ground pepper to taste.



### **Apple Juice**

Juice 4 large apples with stems removed, serve immediately. Mix apple type for flavor. Add a carrot for a sweeter taste and vitamin boost.



### **Island Blend**

Juice 1 medium pineapple, 1 papaya, 1 large orange and 1 guava (peeled and pith removed). Add 1 mango (process in blender). Serve immediately.



### **Carrot Fruit Juice**

Juice 4 large carrots (washed and topped and tailed) with 2 sweet washed apples (stems removed). Serve immediately.



### **Pineapple Juice**

Juice 4 pineapple slices, 1 medium orange and serve immediately.

### **WARNING: SHORT TERM USE**

**Do not operate this appliance for long periods when juicing heavy loads. This appliance must not be used continuously for longer than 40 seconds without allowing it to cool.**



## JUICE EXTRACTOR MAINTENANCE

- **Warning!** Always disconnect the appliance from the power supply before cleaning.
- Allow your appliance to stop completely before cleaning.
- **Warning!** Never immerse your appliance base in water or other liquids.
- Wipe the exterior of the appliance base with a warm soft damp cloth. Dry with a dry towel.
- Remove all accessories and wash in hot soapy water, dry with a dry towel
- Do not use harsh abrasives as they may damage any plastic, non-stick surface or the exterior finish.



## ELECTRICAL REQUIREMENTS

**Please make sure that your house installation voltage corresponds to the voltage marked on the unit.**

Mains supply: 120V ~ 60 Hz

Rated Power: 700 Watts

### **Environmental notice**

Discarded electric appliances are recyclable and should not be discarded in the domestic waste! Please actively support us in conserving resources and protecting the environment by returning this appliance to the collection centres (if available).



# WARRANTY

**Register your product within 30 days of purchase to activate its one-year limited manufacturer's warranty at [ovente.com/register](https://www.ovente.com/register)**

**WARRANTY IS ONLY VALID IF YOU REGISTERED WITHIN 30 DAYS AFTER PURCHASE.**

## LIMITED ONE (1) YEAR WARRANTY

Your product has a one (1) year warranty period from the date of purchase from an authorized retailer. In the event that the product is defective, feel free to contact us to arrange for a replacement. This warranty only covers defects in workmanship and materials. The warranty does not include damage due to abuse or misuse, any commercial use or accidents.

## LIMITATIONS

The warranty stated above is the only warranty applicable to this product. Other expressed or implied warranties are hereby disclaimed. No verbal or written information given by the Manufacturer, its agents or employees shall create a guarantee or in any way increase the scope and duration of this warranty. Repair or replacement as provided under this warranty is the exclusive remedy of the consumer. The manufacturer shall not be liable for incidental or consequential damages resulting from the use of this product. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the applicable warranty period set forth above except to the extent prohibited by law. Consumer rights may vary from state to state.

**Customer Support: [ovente.com/support](https://www.ovente.com/support)  
Visit us at [ovente.com](https://www.ovente.com)**



Facebook.com/ovente



@OventeTweets



@Ovente