



LIMITED TWO (2) YEAR WARRANTY

We aim to make your life easier by producing top-quality housewares, designed with you in mind. We have pledged to uphold all our offerings to the highest standards, with two- (2) year warranty from the date of purchase from authorized retailer.

LIMITATIONS

The warranty stated above is the only warranty applicable to this product. Other expressed or implied warranties are hereby disclaimed. No verbal or written information given by the Manufacturer, its agents or employees shall create a guarantee or in any way increase the scope and duration of this warranty. Repair or replacement as provided under this warranty is the exclusive remedy of the consumer. This warranty covers defects in workmanship and materials. It does not include damage due to abuse, misuse, commercial use, accidents or natural wear and tear. In case of replacement, shipping and handling fee may apply. The manufacturer shall not be liable for incidental or consequential damages resulting from the use of this product. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the applicable warranty period set forth above except to the extent prohibited by law. Proof of purchase may be required to validate the order. Promotional items may not be covered under any warranty. Consumer rights may vary from state to state.

Customer Support: 855.926.2626

Visit us at ovente.com



[Facebook.com/ovente](https://www.facebook.com/ovente)



[@OventeTweets](https://twitter.com/OventeTweets)



[@Ovente](https://www.instagram.com/Ovente)



[youtube.com/ovente](https://www.youtube.com/ovente)

OVENTE®

Temperature Control Stainless Steel Cordless Electric Kettle, 1.7L

KS890 Series



Before using please read the instruction manual and keep it for future use.

DIFFERENT FINISHES AVAILABLE AT OVENTE.COM




Available in three elegant colors: Stainless Steel, Red and Brown.



KETTLE MAINTENANCE

1. Wipe the exterior of the kettle with a soft, damp cloth or sponge.
2. Remove water spots with a moistened cloth.
3. Do not use abrasive scouring pads.
4. Never immerse the kettle in water or other liquids.
5. From time to time, depending on the nature of your water supply, limescale will be naturally formed and can be found mostly on the heating element; thus, reducing the heating efficiency.
(Refer to the descaling instruction).

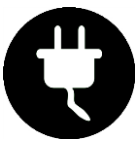

TECHNICAL SPECIFICATIONS

Model: KS88

Input Voltage: 110-120V

Power: 900-1100W


Hertz: 50/60Hz



IMPORTANT SAFEGUARDS

When using your kettle, basic safety precautions should always be followed, including the following:

- Read the instruction carefully and thoroughly, before any operation of the kettle.
- Before connecting the kettle to a power source, check whether the voltage indicated on the appliance (bottom of the kettle and base unit) corresponds with the main voltage in your home.
- Do not touch hot surfaces or hot water. Use handles. Care must be taken since burns can occur from touching hot parts or from spilled hot liquid.
- To protect against fire, electric shock, and personal injury, do not immerse cord, plug, power base, or electric kettle in water or other liquid.
- Unplug from outlet when not in use and allow the kettle to cool before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner. Call our toll-free customer service number for immediate assistance.
- The use of accessory attachments not recommended by the manufacturer may result in fire, electric shock, or personal injury.
- Do not use outdoors.
- Switch OFF and unplug from the outlet before filling, emptying or cleaning, or when not in use.
- Do not overfill the kettle. Refer to the maximum level indicator.
- To avoid against fire, do not operate near explosive and/or flammable fumes. Do not operate or place any part of this appliance on or near gas, electric burner or in a heated oven.

- Never yank on the cord as this may damage the cord and will cause a risk of electric shock.
- To disconnect electric kettle, press  and then remove plug from wall outlet. Never pull on cord as this may damage the cord and eventually cause electric shock.
- Do not use appliance for other than intended use.
- To avoid possible steam damage, do not face the spout when operating the kettle.
- If operated on wooden furniture, use a protective pad to prevent damage on delicate finishes.
- Do not switch your kettle ON if it is empty.
- Use the kettle only with the supplied base unit. Do not use the base unit for other purposes.
- While the water is boiling, do not attempt to open the lid of the kettle to avoid the steam scalding on your hand.
- Avoid any liquid to sprinkle on the LCD board and the pressed key while in the operating process. The water may plunge in the product that may cause the kettle to malfunction.
- Keep the kettle out of the reach of children. Do not leave children unsupervised with the kettle.
- This appliance should not be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have are supervised by the person who is responsible for their safety.

CLEANING

Smell / Spotting / Descaling

The residue, smell and red spots do not come from the Stainless Steel or glass. They can be caused by limescale which are natural deposits (calcium, magnesium, iron and copper) that may build up depending on the water in your area, which, over time, can cause spotting and residue.

While you do not need to worry about hygienic or health-related issues, we do strongly recommend descaling your kettle from time to time to avoid limescale build-up and other issues.

What you need:

- 3 table spoons White Vinegar
- 1 cup Water

Steps:

1. Mix 1 cup water to 3 table spoons vinegar solution
2. Pour solution into kettle and close the lid
3. Bring solution to a boil and leave for 5-8 hours.
4. Dispose solution down the drain.
5. If the problem persists, repeat from step 1 until limescale dissipates.

Caution: the solution may be extremely hot during this process.

Should you have any questions and/or concerns please feel free to contact us.




KNOW YOUR OVENTE KETTLE

What is Keep Warm Function?

- Keep Warm Function can be used before, during or completion of the water heating cycle.
- It functions when temperature drops to 185°F and will reboil the water back to 212°F.

The kettle will continuously stay on to Keep Warm Function for a period of 2 hours or as long as the kettle is not lifted from the base. Once lifted from the base, the kettle will turn off. Repeat if desired.

USING THE KEEP WARM FUNCTION

Press the On/Off button  for 3 seconds. A red indicator light will keep on flashing on the window display.



Press and hold the On/Off button for 3 seconds



Red light will continuously flash to indicate that the Keep Warm function is ON.


SPECIAL SAFETY INSTRUCTIONS FOR THE KETTLE

- It is recommended to use filtered or tap water when filling the kettle.
- The water level must be within the MIN and MAX marks.
- Switch off the kettle before removing from the base.
- Always ensure that the lid is tightly closed.
- The base and exterior of the kettle must not become wet.
- Always make sure that the kettle is positioned properly on its power base.
- Keep the outside surface of the kettle dry before turning it ON.
- The kettle will automatically shut off once it reached the designated temperature.

Temperature can be changed by pressing the  button accompanied by an indicator light.

- Temperature varies $\pm 10^{\circ}\text{F}$ (5°C) however still within range for optimal brewing for tea and coffee.


BEFORE FIRST USE

We strongly recommend to fill the kettle with regular tap water at MAX Level (1.7L), bring it to a full boil by pressing the On/Off button . A red solid light will indicate that the kettle will boil until it reaches the boiling point of 212°F . The red indicator light will shut off automatically when the boiling process completes.



USING THE KETTLE

1. Refer to Figure 1 to open the kettle.
2. Fill the kettle with water up to desired level. Do not overfill to prevent the risk of spillage. Use the water level indicator to measure the desired amount of water.
3. Put the base on a dry and flat surface.
4. Place the kettle on the base.
5. Connect the kettle to a properly installed 110-120V 50/60Hz socket.
6. Insert the plug to the socket.
7. To boil water, press the "⏻" key shortly, a red LED light will signify that the kettle is on.
8. The LED will light up to indicate that the kettle is working. After boiling, the kettle switches off automatically.
9. Disconnect the kettle from the main power supply.

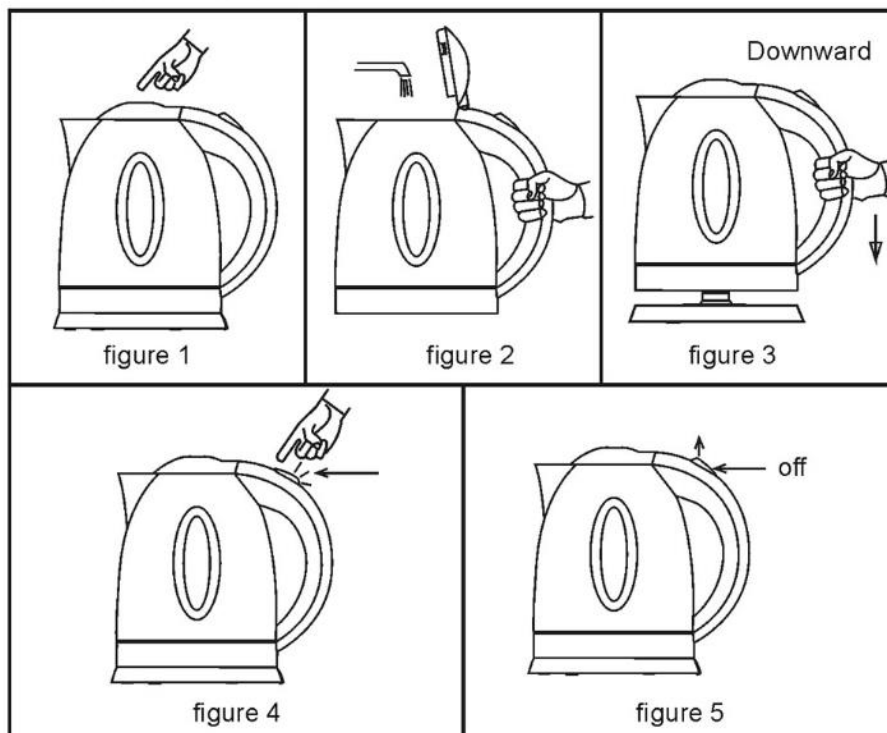

VARIABLE TEMPERATURE CONTROL

The temperature indicator panel has 5 different preset Fahrenheit temperatures for optimal tea and coffee brewing.

212°F - Press the  button **once**; Red indicator light; Boiling Water

140°F – Press the  button **once**; Green light

158°F – Press the  button **twice**; Blue light





176°F – Press the  button **thrice**; Yellow light

194°F – Press the  button **four times**; Purple light

212°F - Hold the  button **for 3 seconds**; Flashing red indicator light; Keep Warm Function



TROUBLESHOOTING

Problem	Solution
Indicator light is not turning on	Ensure that the kettle is plugged in and positioned properly on the power base. Press the  once to boil water or  for desired temperature
Kettle is not heating water	Ensure that the kettle is plugged in and positioned properly on the power base. Press the  once to boil water or  for desired temperature. Check if the indicator light is powered ON. If kettle is still not heating water, please call Ovente's Customer Service (855-926-2626)
Lid is only opening half way	This is normal for safety precautions. Open the lid fully and fill or pour water.
There are brown/red/white spots at the bottom of my kettle	This is normal especially on areas with hard water. Please refer to the page 8 for descaling instructions.