

OVENTE®

ELECTRIC TWO-SPEED DRINK MIXER

MS2090 SERIES



Before use, please read this manual thoroughly and save for future reference.

ovente.com

ELECTRIC TWO-SPEED DRINK MIXER

MS2090 SERIES



ELECTRIC TWO-SPEED DRINK MIXER

MS2090 SERIES

TABLE OF CONTENTS

IMPORTANT SAFETY	4
PARTS AND FEATURES	5
USING THE DRINK MIXER	7
RECIPE	8 - 9
CARE AND MAINTENANCE	9
ELECTRICAL REQUIREMENTS	10



IMPORTANT SAFEGUARDS

When using your drink mixer, basic safety precautions should always be followed, including the following:

- ⚠ READ ALL INSTRUCTIONS.
- ⚠ Before using, ensure that the voltage specified complies with your home's voltage before plugging it in.
- ⚠ To protect against risk of electrical shock, do not immerse cord, plugs or cooking unit in water or other liquids.
- ⚠ Close supervision is necessary when any appliance is used by or near children.
- ⚠ Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking the parts off and before cleaning the appliance.
- ⚠ Do not operate any appliance with a damaged cord or plug or when the appliance malfunctions.
- ⚠ The use of accessory attachments, not recommended or sold by appliance manufacturer, may cause hazards.
- ⚠ Do not use outdoors.
- ⚠ Do not let cord hang over the edge of a table or counter.
- ⚠ Do not let cord touch hot surfaces.
- ⚠ Do not place on or near a hot gas or electric burner, or in a heated oven.
- ⚠ To disconnect, remove plug from wall outlet.
- ⚠ Do not use appliance for other than intended use.
- ⚠ This drink mixer is for household use only.
- ⚠ This appliance is not intended to use by people (including children) with reduced physical, sensory or mental capabilities. It is not intended for people with lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- ⚠ Children should be supervised to ensure that they do not play with the appliance.
- ⚠ Keep the appliance and its cord out of reach of children less than 8 years.
- ⚠ Please ensure that the drive shaft and spindle are installed properly.
- ⚠ The food volume should not exceed the maximum capacity (8.5oz/250ml) of the stainless steel cup.
- ⚠ The temperature for stirring the food should not exceed 176F.
- ⚠ The product is equipped with a safety lock. Only when the head is pushed down to the cup, will the appliance work.
- ⚠ Normal Operating Time: 3-minute Intervals
- ⚠ DO NOT IMMERSER MIXER IN WATER OR ANY OTHER LIQUIDS



PARTS & FEATURES

MIXER'S 100-WATT MOTOR

The motor makes it more powerful and efficient when mixing ingredients

SAFETY SWITCH ROD

Prevents the motor from engaging the spindle before the cup is in the safe place

SPINDLE

Equipment for mixing liquids and ingredients

RELEASE BUTTON

Lowers the spindle into the stainless steel cup

COMPRESSIBLE SHAFT

Allows the motor head to be moved into the upward or downward position

STAINLESS STEEL CUP

A 15oz container that is used for combining your liquids

POSITIONING BOLT

It allows the motor head to move up the shaft when the release button presses against it

SPEED BUTTON

Features 2 different speed settings



ELECTRIC TWO-SPEED DRINK MIXER

MS2090 SERIES



COOKIES & CREAM MILKSHAKE

Our Drink Mixer lets you enjoy the classic combo of milk and cookies.



CHOCOLATE MILKSHAKE

The kids are going to love a delicious chocolate-flavored milkshake that is perfect for any occasion.



PEPPERMINT MILKSHAKE

Recharge and refresh yourself with a rich and creamy peppermint shake.



COCKTAILS

Opt for a cocktail night with your friends on a perfect weekend.



USING THE DRINK MIXER

When using the drink mixer, basic safety precautions should always be followed, including the following:

- 1 Clean the parts before using the drink mixer for the first time.
- 2 Put the food or drink into the stainless steel cup under the specified capacity. It is highly recommended to only fill the cup halfway (8.5oz) to avoid spills when mixing.
- 3 The head will not lower unless the release button is pressed. (Drink mixer has an extendable shaft, always push down the head down to the cup for mixing.)
- 4 Ensure that the electricity supply is connected.
- 5 When the cup “snapped” in the safety switch rod, set control switch to preferred speed in order to start the process. You can start with Speed 1 (LOW) then increase to Speed 2 (HIGH).
- 6 For hard ice cream or very thick shakes, remove the container from the base then support it with your hand; motor head must be in upward position to hold the cup without the base. Make sure that the cup is still touching the safety switch rod while you’re holding it because the drink mixer will not start if the cup is not connected with it. With mixing shaft still submerged in mixture, move the container around for more thorough mixing.
- 7 During the stirring process, do not put raw material in the cup; you can only add raw material in the cup after the electricity supply has been cut off and when the machine has stopped working.
- 8 When finished, turn unit to O (off). Pour contents from container and serve.
- 9



DRINK MIXER TIPS AND TRICKS

- ★ Most drinks can be mixed in less than two minutes.
- ★ Whole fruits should not be used when making fruit drinks. Mash or puree fruit; add to drink, and mix.
- ★ The cup must always be filled to at least the minimum level mark (150ml) or the liquid will not reach the mixing shaft. When mixing thin mixtures, such as powdered diet drinks, do not fill above maximum level mark (8 ounces/250 ml) or liquid may overflow while mixing.
- ★ For best results, all liquid ingredients should be as cold as possible. Milk drinks will taste best if milk is ice cold. The colder the milk, the thicker and more frothy the drink.
- ★ All syrups and powdered mixes should be added just before mixing to prevent them from sinking to the bottom of the container.
- ★ The Drink Mixer does not crush ice.



RECIPES

Always add liquid ingredients first then the remaining ingredients. Start mixing on 1 (LOW) then increase Speed to 2 (HIGH). Process to desired consistency for about 1 to 2 minutes.

PEPPERMINT MILKSHAKE



2 cups of vanilla ice cream
½ cup of milk
1-2 tsp peppermint extract or 1-2 tbsp peppermint syrup (to taste)
4 crushed up candy canes
¼ cup semi-sweet chocolate chips
Whipped cream for topping
Extra crushed candy cane to sprinkle on top

INSTRUCTIONS

- 1 Put ice cream, milk, extract and candy canes in cup.
- 2 Mix until smooth.
- 3 Add in chocolate chips and mix for a few seconds.
- 4 Top off with whipping cream and crushed candy cane.



RECIPE

COOKIES & CREAM MILKSHAKE



- 2 scoops of Cookies and Cream Ice Cream
- 1/4 cup of milk
- Whipped cream
- Oreo cookies for garnish

INSTRUCTIONS

- 1 Combine two scoops of ice cream and milk in the cup.
- 2 When thoroughly mixed, pour into milkshake glasses.
- 3 Top with whipped cream and additional cookies.

PEANUT BUTTER & PRETZEL MILKSHAKE



- 1½ cups of vanilla ice cream
- ½ cup of milk
- 2 tbsp creamy peanut butter
- ¼ cup crushed finely crushed pretzels
- *optional ~ whipped cream to top
- *optional ~ chocolate sauce to line the glass

INSTRUCTIONS

- 1 Combine the ice cream, milk and peanut butter in the cup and mix until smooth.
- 2 Line glass with chocolate sauce if desired, and put milkshake into glass.
- 3 Top with whipped cream and additional crushed pretzels.

CARE AND MAINTENANCE

- Unplug the appliance.
- Allow to cool before putting on or taking the parts off and before cleaning the appliance.
- Use water to clean the parts with food contact after using it.
- Install the spindle properly to prevent malfunction or injuries.
- Put warm water into the stirring cup when cleaning.
- Press the switch on for about 10 seconds for cleaning the stirring cup.
- Do not immerse the drink mixer into the water.
- Drink mixer is not dishwasher safe.
- Soft wet cloth can be used to polish the outside of the appliance, do not immerse the drink mixer into water.
- Do not use an abrasive brush, alcohol, etc. when cleaning the drink mixer.
- When storing, keep this appliance in a dry, safe and well-ventilated place.

ELECTRICAL REQUIREMENTS

Voltage : 120V

Power: 1400W

Hertz: 60Hz



PROTECT THE ENVIRONMENT

This product must not be disposed together with the domestic waste. This product has to be disposed at an authorized place for recycling of electrical and electronic appliances. By collecting and recycling waste, you help save natural resources, and make sure the product is disposed in an environmental friendly and healthy way



OVENTE WARRANTY

Register your product within **30** days of purchase to activate its one-year limited manufacturer's warrant at ovente.com/register

NOTE: WARRANTY IS ONLY VALID IF YOU REGISTERED WITHIN 30 DAYS AFTER PURCHASE.

LIMITED ONE (1) YEAR WARRANTY:

Your product has a one (1) year warranty period from the date of purchase from an authorized retailer. In the event that the product is defective, feel free to contact us to arrange for a replacement. This warranty only covers defects in workmanship and materials. The warranty does not include damage due to abuse or misuse, any commercial use or accidents.

LIMITATIONS

The warranty stated above is the only warranty applicable to this product. Other expressed or implied warranties are hereby disclaimed. No verbal or written information given by the Manufacturer, its agents or employees shall create a guarantee or in any way increase the scope and duration of this warranty. Repair or replacement as provided under this warranty is the exclusive remedy of the consumer. The manufacturer shall not be liable for incidental or consequential damages resulting from the use of this product. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the applicable warranty period set forth above except to the extent prohibited by law. Consumer rights may vary from state to state.

Customer Support: ovente.com/support

Visit us at ovente.com

OVENTE®

Defining Housewares