

OVENTE®

1.5-Cup Mini Food Processor and Chopper PF1006 Series



Before using please read the instruction manual and keep it for future use.



WARRANTY

Register your product within 30 days of purchase to activate its one-year limited manufacturer's warranty at [ovente.com/register](https://www.ovente.com/register)

WARRANTY IS ONLY VALID IF YOU REGISTERED WITHIN 30 DAYS AFTER PURCHASE.

LIMITED ONE (1) YEAR WARRANTY

Your product has a one (1) year warranty period from the date of purchase from an authorized retailer. In the event that the product is defective, feel free to contact us to arrange for a replacement. This warranty only covers defects in workmanship and materials. The warranty does not include damage due to abuse or misuse, any commercial use or accidents.

LIMITATIONS

The warranty stated above is the only warranty applicable to this product. Other expressed or implied warranties are hereby disclaimed. No verbal or written information given by the Manufacturer, its agents or employees shall create a guarantee or in any way increase the scope and duration of this warranty. Repair or replacement as provided under this warranty is the exclusive remedy of the consumer. The manufacturer shall not be liable for incidental or consequential damages resulting from the use of this product. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the applicable warranty period set forth above except to the extent prohibited by law. Consumer rights may vary from state to state.

**Customer Support: [ovente.com/support](https://www.ovente.com/support)
Visit us at [ovente.com](https://www.ovente.com)**



Facebook.com/ovente



@OventeTweets




@Ovente



FOOD PROCESSOR MAINTENANCE

- Always switch the appliance off at the wall socket and unplug before cleaning.
- Handle the blades and cutting discs with care - they are extremely sharp.
- Some foods may discolor the plastic. This is perfectly normal and won't harm the plastic or affect the flavor of your food. Rub with a cloth dipped in vegetable oil to remove the discoloration.
- Wipe the power unit with a damp cloth, then dry. Ensure that the interlock area is clear of food debris.
- Don't touch the sharp blades, brush them clean using hot soapy water, then rinse
- Thoroughly under the tap. **Don't immerse the blade unit in water.**
- Leave to dry upside down.
- Attachments can be hand wash or washed on the top rack of your dishwasher. A short low temperature program is recommended.
- Ensure the appliance is clean and dry before storage.

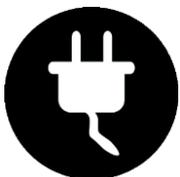

ELECTRICAL REQUIREMENTS

Voltage: 120V

Power: 100W

Hertz: 60Hz



IMPORTANT SAFEGUARDS

When using your food processor, basic safety precautions should always be followed, including the following:

- Read all instructions carefully before use.
- Before plugging in the appliance, check that the socket and power matched those of the appliance. Attention shall be paid to whether the rated value of input supply voltage is according to that of rated input value or not.
- **WARNING!** Never immerse an electrical appliance or any part of the cord or plug in any liquids including water. Electrical connections should never be exposed to water due to the risk of electric shock or electrical fire. Never operate with wet hands.
- Do not make use of an extension cord with this electrical appliance.
- Do not let the electrical cord hang over the edge of a table or countertop.
- Do not damage the cord with sharp edges or heat. Additionally, do not bend, smash or strain the cord, in order to avoid damage.
- If the power cord or the plug has become damaged, do not operate the appliance and avoid picking it up.
- Keep the food processor out of the reach of children. Do not leave children unsupervised with the food processor.
- This appliance should not be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are supervised by the person who is responsible for their safety.
- Do not use accessories or attachments not recommended by the Ovente as it may cause damage to the unit and a risk of personal injury.

- Do not use the appliance after a malfunction or if it has been dropped or damaged.
- Extreme caution must be observed when using the food processor and accessories.
- Keep hands and utensils away from moving blades while operating the product.

A scraper may be used but only when the product is not operating.

- Blades are sharp. Handle carefully.
- Never place cutting blades on the base without first putting the bowl properly in place.
- When processing fish, meat, vegetable, etc, they should be got rid of the bones, muscles or skin.
- Always ensure the cover is securely locked in place before operating the product.
- Do not attempt to defeat the cover interlock mechanism.
- Do not operate this appliance when it is empty.
- After each use, unplug the appliance and only clean the appliance when no power is running through it.
- To disconnect, be sure that the food processor is off and gently pull the plug from the wall outlet. Do not unplug by pulling the cord itself.
- This is not a commercial appliance. It should only be used for household purposes and should be only be used in indoor conditions.
- The food processor should be used on flat, even surfaces.
- The first time you use your Food Processor there may be a slight odor given off. This is normal and is just the manufacturing residues burning off.



TIPS AND HINTS FOR FOOD PROCESSOR

Material	Weight	Food size	Blade	Time
FUNCTION				
Meat	0.44 lb	1-inch block	Chopping blade	30S
Fish, shrimp	0.22 lb	-		
Vegetable	0.44 lb	-		
Eggs	1-4 pc(s)	--	Mixer	30s
Carrot , cucumber, Potato, cabbage	0.44 lb	--	slicing blade	30s
Carrot , cucumber, Potato, cabbage, cheese	0.44 lb	-	Shredding blade	30S

SLICE/SHRED DISCS ATTACHMENT

1. Fit the pillar and bowl onto the motor base.
2. Put the slice blade on the slice support or shred blade onto the shred support.
3. Fit the lid.
4. Put the high cover onto the container and turn it clockwise.
5. Push the switch button with one hand and put the food into the feed tube with the other hand. Push down evenly with the pusher.

CAUTION: Never put your fingers in the feed Tube.

NOTE:








- Use fresh ingredients.
- Don't cut food too small. Fill the width of the \feed tube fairly full. This prevents the food from slipping sideways during processing.
- When using the chopper disc, place ingredients horizontally.
- When slicing or shredding: food placed upright comes out shorter than food placed horizontally
- There will always be a small amount of waste on the plate or in the bowl after processing.

- A short power supply cord is provided to reduce the risk of becoming entangled in or tripping over a longer cord. An extension cord is not recommended for use with this product, but if one must be used:
 - The marked electrical rating must be at least as great as that of the product;
 - If the product is of a 3-prong grounding type, the extension cord must be a grounding-type 3-wire cord.
 - Arrange the extension cord so that it will not drape over the countertop or tabletop where it can be tripped over or pulled.

WARNING: This product is equipped with a polarized plug (one blade is wider than the other blade) to reduce the risk of electrical shock. This is a safety feature. The plug will fit into a polarized outlet only one way. If you are unable to insert the plug into the electrical outlet, try reversing the plug. If the plug still does not fit, contact a qualified electrician. Never use the plug with an extension cord unless you can fully insert the plug into the extension cord. Do not alter the plug. Do not attempt to defeat the safety purpose of the polarized plug.



FOOD PROCESSOR PARTS

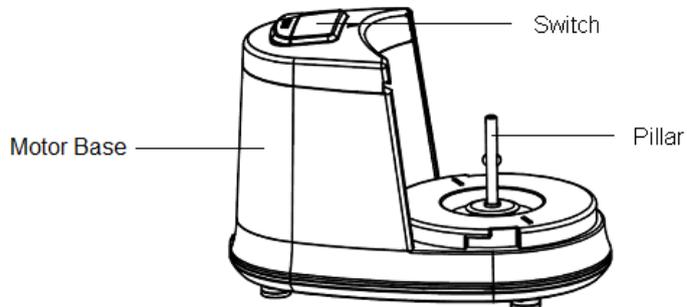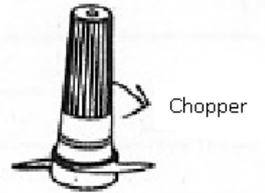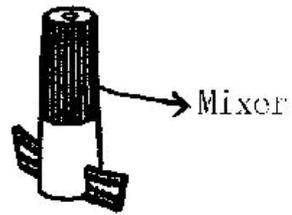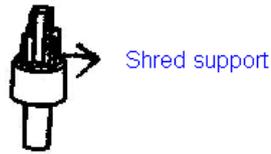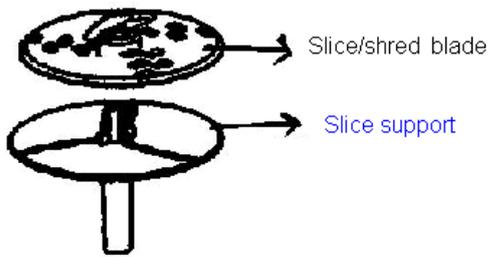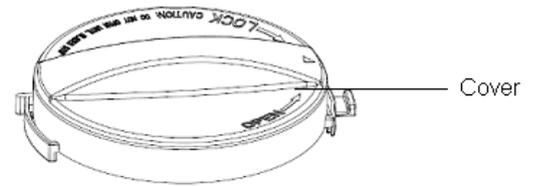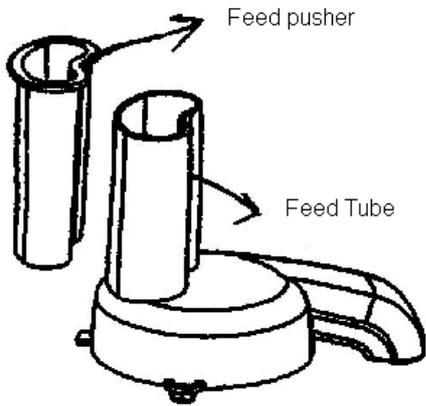



USING THE FOOD PROCESSOR

Do not attempt to chop ice in this food processor; it will damage the bowl, dull the Chopping Blade. Your processor is not suitable for crushing or grinding coffee beans, or converting granulated sugar to caster sugar. When adding almond essence or flavoring to mixtures avoid contact with the plastic as this may result in permanent marking.

1. Remove all packaging, Take care of the knife blades as they are very sharp. These covers should be discarded as they are to protect the blade.
2. Wash the parts see "cleaning".
3. Place the food processor base on a dry, level countertop with the controls facing you. Do not plug the unit in until it is fully assembled.
4. Fit the detachable pillar onto the motor base.
5. With the bowl on the base, use the handle to turn the work bowl clockwise to lock it onto the housing base.
6. Fit an attachment over the pillar.

NOTE: Always fit the bowl and attachment onto the machine before adding ingredients.

7. Fit the lid ensuring the top of the pillar locates into the center of the lid.

NOTE: The processor won't work if the bowl and lid are fitted incorrectly.

8. Push the switch button and the processing will be finished within 30 seconds.

10. Reverse the above procedure to remove the lid, attachments and bowl.

NOTE: Always switch off before removing the lid.