

**OVENTE®**

**MINI FOOD  
PROCESSOR**  
PF1007 SERIES



*Before use, please read this manual thoroughly and save for future reference.*

[ovente.com](http://ovente.com)



# MINI FOOD PROCESSOR

PF1007 SERIES

# MINI FOOD PROCESSOR

HA015 SERIES

## TABLE OF CONTENTS

IMPORTANT SAFETY	. . . . .	4
PARTS AND FEATURES	. . . . .	5
USING FOOD PROCESSOR	. . . . .	7
CARE & MAINTAINANCE	. . . . .	8
ELECTRICAL REQUIREMENTS	. . . . .	9



# IMPORTANT SAFEGUARDS

When using your mini food processor, basic safety precautions should always be followed, including the following:

- ❗ Read all instructions.
- ❗ To protect against risk of electric shock, do not put base, cord or plug into water or any other liquids.
- ❗ Close supervision is necessary when any appliance is being used by children.
- ❗ Turn the unit "OFF" and unplug from the outlet when not in use, when putting on or taking the parts off and before cleaning. To disconnect, turn the unit "OFF", grasp plug and pull from wall outlet.
- ❗ Never yank on cord.
- ❗ Avoid making contact with moving parts.
- ❗ Do not operate any appliance with a damaged cord/plug or after the appliance malfunctions or damaged in any manner. Contact service provider immediately.
- ❗ The use of attachments not recommended or sold by the appliance manufacturer may cause fire, electric shock or injury.
- ❗ Do not use outdoors.
- ❗ Do not let cord hang over the edge of a table or counter and don't let it touch hot surfaces.
- ❗ Keep hands and utensils away from moving blades or discs while processing food to prevent the possibility of severe injuries or damage to the food processor. A spatula (not included) can be used, but it must only be used when the food processor is not running.
- ❗ Blades are sharp. Please handle with care.
- ❗ Be sure to insert or remove chopping blade and slice/shred disc by using hubs to avoid injury.
- ❗ To avoid injury, never place chopping blade or slice/shred disc on base without putting the bowl properly in place. Make sure that the motor, disc and chopping blade have stopped completely before removing the cover.
- ❗ Be certain that the cover is securely locked in place before operating the appliance.
- ❗ When cleaning the food processor, do not put the main body into water or any other liquids. Wet cloth can be used to wipe the main body.
- ❗ Water temperature for washing the container or other parts is not allowed to be over 140°F. Otherwise, they may be deformed.
- ❗ This appliance is not intended to be used by people (including children) with reduced physical, sensory and mental capabilities. This appliance is not for people with lack of experience and knowledge, unless they have been given supervision or instructions concerning the use of the appliance by a person responsible for their safety.
- ❗ Normal operating time: 2-minute intervals.
- ❗ Remove bones, skins or seeds before processing meat, fish or fruits, etc.
- ❗ This appliance is intended for household use only and not for commercial or industrial use.
- ❗ **POLARIZED PLUG**  
This appliance has a polarized plug, which means that the plug has a small blade for the hot wire and a wide blade for the neutral wire. To reduce the risk of electric shock, only insert the plug into the outlet slots in one direction – wide blade to wide slot and narrow blade to narrow slot. If the plug does not fit fully in the outlet, reverse the plug. If it still doesn't fit, contact a qualified electrician. Do not modify the plug in any way.

# PARTS & FEATURES



- 50-Watt Motor – Handles dense slicing, shredding, chopping and mixing.
- Pulse Control – Large pulse control for instant food processing.
- Mixer – effective for mixing and blending ingredients.
- Stainless Steel Chopping Blade – The standard blade that's best for average jobs like churning out pesto and hummus.
- Stainless Steel Shredding Disc – Sharp shredder for shredding food before falling into the bowl.
- 1.5L Large-Capacity BPA-Free Bowl – durable and sturdy bowl that is perfect for everyday use.
- Food Pusher – can be used to push food down the mill or chute of the mini food processor.
- Food Chute – allows the continuous flow of food right out and into your container.

# MINI FOOD PROCESSOR

## PF1007 SERIES



### MINCED GARLIC

Garlic Supplementation is known for boosting the immune system and reducing high blood pressure or hypertension.



### FRESH TOMATO SAUCE

Homemade tomato sauce is mouthwatering, satisfying and surprisingly easy to make!



### SALSA

Create delicious party starters with homemade salsa and tortilla chips!



### NUTS

Toss whole nuts into the processor, then add them to your favorite yogurt, ice cream, cookies, salad or to any food that you love.



# USING THE MINI FOOD PROCESSOR

## 1 How to Use the Stainless Steel Chopping Blade



The stainless steel chopping blade speeds up everyday kitchen tasks and is designed to chop, crumb, grind, mince and mix quickly.

- 1 Place the bowl over the center post in the base, then turn the bowl clockwise until you hear it click into place.
- 2 Hold the stainless steel chopping blade by its center shaft and slide it down onto the center post.
- 3 Cut the food into 0.8in-10in blocks
- 4 Put the food into the bowl; the bowl can accommodate up to 0.44lbs of food.
- 5 Place the lid onto the bowl so that it's facing the base. Twist the lid towards the base until you hear it lock into place.
- 6 Plug the cord to an electrical outlet.
- 7 Press down the food pusher lightly but firmly while pushing the pulse control for 30-20 seconds.
- 8 After processing food, release the pulse control.

## 1 How to Use the Stainless Steel Shredding Disc

The stainless steel shredding disc is capable of slicing and shredding food in a fast and effective way.

- 1 Place the bowl over the center post in the base, then turn the bowl clockwise until you hear it click into place.
- 2 To process food into the serving bowl using the food chute, place the disc stem onto the center post in the bowl. Hold the shredding disc by the hub or by its edge with the desired side (slide or shred) on top and push it down on the discharge disc.
- 3 Cut the food into 0.8in-10in block
- 4 Put the food into the bowl; the bowl can accommodate up to 0.44lbs of food.
- 5 Place the food chute or the cover onto the bowl so that its tab is facing
- 6 Plug the cord to an electric outlet.
- 7 Press down the pusher lightly but firmly while pushing the pulse control for 30-20 seconds.
- 8 After processing the food, release the pulse control.

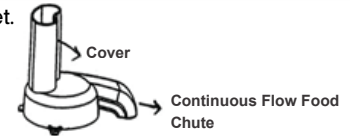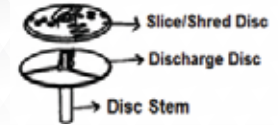




# CARE & MAINTAINANCE

- NOTE: Do not attempt to sharpen the cutting edges of the chopping blade and shredding disc. They are permanently sharpened at the factory and will be ruined by attempted sharpening.
- Be sure that the unit is “OFF” and the cord is unplugged before cleaning.
- Whenever possible, rinse parts immediately after processing for easy cleanup.
- Wipe the base and feet with a damp cloth and dry thoroughly. Stubborn spots can be removed by rubbing with a damp cloth and mild, non-abrasive cleaner. Do not immerse the base in liquid.
- All removable parts can be washed by hand.
- Some staining of parts may occur. Use 2 tablespoons of baking soda and 1 tablespoon of water, then apply to stains and let it stand overnight. Rinse and dry.
- Do not use rough scouring pads or cleansers on any plastic or metal parts.
- Blades are sharp. Handle carefully.
- Be sure to insert or remove chopping blade and shredding disc by using hubs to avoid injury.
- Never place chopping blade or shredding disc on base without putting the bowl properly in place to avoid injury. Make sure that the motor, shredding disc, and chopping blade have stopped completely before removing the cover.
- Be certain that the cover is securely locked in place before operating appliance.
- When cleaning the food processor, do not put the main body into water and any other liquids. A wet cloth can be used to wipe the main body.
- Water temperature for washing the container or other parts is not allowed to be over 140°F. Otherwise, they may be deformed.
- Remove bones, skins or seeds before processing meat, fish or fruits, etc.
- Normal operating time: 2-minute intervals.



# ELECTRICAL REQUIREMENTS

<b>Model</b>	PF1007	<b>Turning speed</b>	2300-2800r/min
<b>Rated Voltage</b>	120V	<b>Electric shock protection</b>	
<b>Rated Frequency</b>	60Hz	<b>Rated working time</b>	≤2min
<b>Rated Power</b>	50W	<b>Rest period</b>	≥2min



## PROTECT THE ENVIRONMENT

This product must not be disposed together with the domestic waste. This product has to be disposed at an authorized place for recycling of electrical and electronic appliances. By collecting and recycling waste, you help save natural resources, and make sure the product is disposed in an environmental friendly and healthy way.

# MINI FOOD PROCESSOR

PF1007 SERIES





# OVENTE WARRANTY

Register your product within **30** days of purchase to activate its one-year limited manufacturer's warrant at [ovente.com/register](https://ovente.com/register)

**NOTE: WARRANTY IS ONLY VALID IF YOU REGISTERED WITHIN 30 DAYS AFTER PURCHASE.**

## LIMITED ONE (1) YEAR WARRANTY:

Your product has a one (1) year warranty period from the date of purchase from an authorized retailer. In the event that the product is defective, feel free to contact us to arrange for a replacement. This warranty only covers defects in workmanship and materials. The warranty does not include damage due to abuse or misuse, any commercial use or accidents.

## LIMITATIONS

The warranty stated above is the only warranty applicable to this product. Other expressed or implied warranties are hereby disclaimed. No verbal or written information given by the Manufacturer, its agents or employees shall create a guarantee or in any way increase the scope and duration of this warranty. Repair or replacement as provided under this warranty is the exclusive remedy of the consumer. The manufacturer shall not be liable for incidental or consequential damages resulting from the use of this product. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the applicable warranty period set forth above except to the extent prohibited by law. Consumer rights may vary from state to state.

**Customer Support:** [ovente.com/support](https://ovente.com/support)

Visit us at [ovente.com](https://ovente.com)

**OVENTE®**

*Defining Housewares*