

# OVENTE®

CYCLONIC  
VACUUM



SUPER-TURBO  
**2620 Series**

*Before use, please read this manual thoroughly and save for future reference.*

[ovente.com](http://ovente.com)



ENERGY SAVING  
SPEED  
CONTROL



Intuitive speed settings allow you to regulate how much power and energy you want to use

# CYCLONIC CANISTER VACUUM

ST2620 SERIES

## TABLE OF CONTENTS

IMPORTANT SAFETY	• • • • • • • • • •	4-5
PARTS AND FEATURES	• • • • • • • • • •	6
USING YOUR VACUUM	• • • • • • • • • •	7-8
CARE & MAINTENANCE	• • • • • • • • • •	9-10



# IMPORTANT SAFEGUARDS

When using this vacuum, basic safety precautions should always be followed, including the following:

- ❗ READ ALL INSTRUCTIONS.
- ❗ Check to ensure your electricity supply corresponds to that shown on the rating plate, which can be found on the base of the vacuum between the wheels. The vacuum must only be used as rated.
- ❗ Do not leave appliance when plugged in. Unplug from electrical outlet when not in use.
- ❗ Do not use outdoors or on wet surfaces or to vacuum water or other liquids—electric shock and personal injury may occur.
- ❗ Do not use with a damaged cord or plug; do not pull or carry by the cord; do not use the cord as a handle; do not close a door on the cord or pull the cord around sharp edges or corners. Do not run the machine over the cord. Keep the cord away from heated surfaces and open flames.
- ❗ Do not unplug by pulling on the cord. To unplug, grasp the plug, not the cord.
- ❗ Do not handle the plug or vacuum with wet hands.
- ❗ Do not use the vacuum without the canister and the filter in place.
- ❗ Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- ❗ Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- ❗ Do not allow use to anyone unable to operate the vacuum properly.
- ❗ Use only as described in this manual. Use only with Ovente recommended attachments, accessories, and replacement parts.
- ❗ Keep hair, loose clothing, fingers, and all parts of body away from openings in the vacuum and moving parts such as the floor brush.



# IMPORTANT SAFEGUARDS

- ⚠ Do not use without filter in place.
- ⚠ Ensure that the cord is fully extended.
- ⚠ Do not use the vacuum to pick up sharp hard objects, small toys, pins, paper clips, etc. They may cause damage to the vacuum.
- ⚠ The use of an extension cord is not recommended.
- ⚠ Store the vacuum indoors. Put the vacuum away after use.
- ⚠ Turn off all controls before unplugging.
- ⚠ Always make sure the cord stopper is firmly in place before rewinding. Hold plug when rewinding onto cord reel. Do not allow plug to whip when rewinding.
- ⚠ Take extra care when cleaning on stairs; always work with the machine at the bottom of the stairs. Keep vacuum on the floor. Do not put on chairs, tables, etc.
- ⚠ Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- ⚠ Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- ⚠ Ensure that the power cable never becomes wet or moist during operation.
- ⚠ Never submerge the appliance or the power cable in water, and do not clean these components under running water.



# PARTS & FEATURES



- 1 | ENERGY SAVING SPEED CONTROL
- 2 | BAGLESS TRANSLUCENT DUST COMPARTMENT
- 3 | AUTOMATIC CABLE REWIND
- 4 | 1.5 METER CRUSH-PROOF HOSE
- 5 | 5 METER POWER CORD
- 6 | TELESCOPIC STAINLESS STEEL WAND
- 7 | HEPA FILTRATION SYSTEM
- 8 | 360 DEGREE SWIVEL HOSE

## ACCESSORIES



PET/SOFA BRUSH



MULTI-ANGLE BRUSH

### ALSO INCLUDES

- 11 | STANDARD FLOOR BRUSH
- FURNITURE NOZZLE (NOT SHOWN)
- CREVICE TOOL (NOT SHOWN)
- BRISTLE BRUSH (NOT SHOWN)



BAGLESS DESIGN WITH TRANSLUCENT DUST COMPARTMENT



HEPA FILTER CAPTURES SMALL DUST PARTICLES



CORD REWIND FOR QUICK AND EASY STORAGE



CRUSH-PROOF HOSE WITH HANDLE AIRFLOW CONTROL



 
# USING YOUR VACUUM

## ASSEMBLING


- Fit the hose onto the vacuum cleaner by inserting the rotating hose connection into the vacuum cleaner until you hear a click. To remove the hose, press the button at the side of the hose connection, and then pull it out.




- Fit the telescopic tube into the other end of the hose.




- Adjust the length of the telescopic tube by pushing the locking mechanism down and pulling in the bottom section of the tube to a suitable length. When storing, shorten the tube as far as possible.

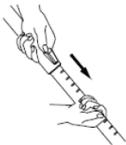

- Fit the floor brush into the telescope tube.

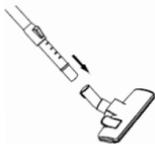

- **Floor Nozzle**  
The floor nozzle has two settings. When cleaning hard surfaces (parquet flooring, flooring tiles, etc.), the nozzle brushes should be extended. When cleaning carpets and mats, the brushes should be retracted into the nozzle. Press the brush change button to switch between the two settings

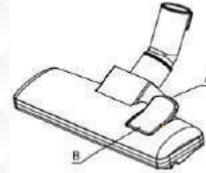

- **Crevice and Bristle Brush**  
For radiators, corners, skirting boards, etc.



- **Furniture Nozzle**  
For furniture, curtains, drapes, etc.



- **Pet/Sofa Brush**  
For upholstery/sofa, etc.



- **Multi-Angle Brush**  
For high-reaching ceilings, lighting, furniture tops, etc





# USING YOUR VACUUM

- Before using the vacuum, first roll out a sufficient length of the electric flex cable and then plug it into the power outlet.
- The yellow mark on the electric cable is its maximum length—this must not be exceeded.
- To switch on the device, press the foot pedal button on the casing with your foot.
- To rewind the power cable, press the button with one hand and guide the cable with the other hand to ensure that it does not whip, causing damage.



## ENERGY SAVING




Conserve energy by using the speed control.

## EMPTYING DUST CONTAINER

Empty the dust container regularly. The latest you should empty it is when the quantity of dirt in the dust container has reached the "MAX" mark or the suction power has dropped.

- Switch off the vacuum cleaner and disconnect the plug from the power outlet. To do this, always pull on the plug and not on the cable.
- Release the dust container by pressing down the release button (1).
- Lift the dust container forward and out of the cylinder vacuum cleaner (2).
- When emptying the dust container, hold it low over a dustbin.
- Press the open button. The base opens and the dust falls into the dustbin (3).
- Carefully knock the remaining dust loose.
- Close the base.
- Place the dust container onto the cylinder vacuum cleaner.
- Check whether the dust container is securely seated.

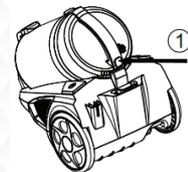



# CLEANING YOUR VACUUM & MAINTENANCE

## CLEANING THE MOTOR FILTER

- Turn off and unplug cleaner.
- Remove the dust container.
- Open the dust container cover and take the filter out.
- Hold the protective motor filter over a dustbin. For a rough clean, gently knock it over a dustbin.
- Insert the dry protective motor filter back into its holder.
- Place protective motor filter together back into its receptacle.
- Replace the filter cover by hooking it precisely from above first, and then engage the lock by pressing it until audibly clicks into place.
- Place the dust container onto the cylinder vacuum cleaner.
- Check whether the dust container is securely seated.


 



**IMPORTANT!** Never use the vacuum cleaner without a motor filter.

## CLEANING THE EXHAUST AIR FILTER

The exhaust air filter cleans the air one final time before it leaves the exhaust sponge filter of the vacuum cleaner. You can clean the exhaust air filter as follows:

- Switch off the vacuum cleaner and disconnect the plug from the power outlet. To do this, always pull on the plug and not on the cable.
- Remove the dust container.
- Open the exhaust sponge cover.
- Rinse the sponge filter under cold running water and allow to dry.
- Put the exhaust air filter back into place.
- Close the exhaust sponge cover.

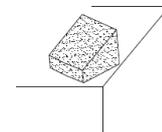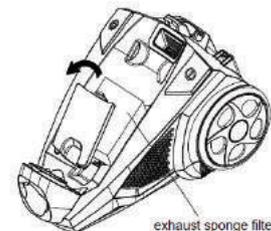



# CLEANING YOUR VACUUM & MAINTENANCE

## TRANSPORT AND STORAGE

- You can lift and carry the vacuum cleaner using the carrying handle. Never pull or lift the vacuum cleaner by the cord.
- Before putting the vacuum away, ALWAYS make sure the cord stopper is set firmly in place, or else the plug will go inside the vacuum. Switch off the socket, unplug, and press the cord rewind button until the cord is fully rewound.
- To save space, the vacuum can be stored upright on its end. The telescopic tube can be hung on the vacuum cleaner by inserting the parking fixture into the vertical parking holder.

## VACUUM MAINTENANCE

- Unplug the vacuum cleaner from the power outlet.
- Clean the vacuum cleaner body by wiping it with a slightly damp cloth.

- Do NOT use any form of strong solvent or abrasive cleaning agent.
- Wait until it dries completely before next use.
- Never wash the appliance or power cord; the housing may be cleaned by means of a slightly dampened cloth only.



## ELECTRICAL REQUIREMENTS

Voltage : 120V

Power: 1400W

Hertz: 60Hz



# OVENTE WARRANTY

Register your product within 30 days of purchase to activate its one-year limited manufacturer's warranty at  
**[ovente.com/register](https://ovente.com/register)**

**NOTE: WARRANTY IS ONLY VALID IF YOU REGISTERED WITHIN 30 DAYS AFTER PURCHASE.**

## LIMITED ONE (1) YEAR WARRANTY:

Your product has a one (1) year warranty period from the date of purchase from an authorized retailer. In the event that the product is defective, feel free to contact us to arrange for a replacement. This warranty only covers defects in workmanship and materials. The warranty does not include damage due to abuse or misuse, any commercial use, or accidents.

## LIMITATIONS

The warranty stated above is the only warranty applicable to this product. Other expressed or implied warranties are hereby disclaimed. No verbal or written information given by the manufacturer, its agents, or employees shall create a guarantee or in any way increase the scope and duration of this warranty. Repair or replacement as provided under this warranty is the exclusive remedy of the consumer. The manufacturer shall not be liable for incidental or consequential damages resulting from the use of this product. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the applicable warranty period set forth above except to the extent prohibited by law. Consumer rights may vary from state to state.

**Customer Support: [ovente.com/support](https://ovente.com/support)**  
**Visit us at [ovente.com](https://ovente.com)**

**OVENTE®**

*Defining Housewares*