

OVENTE®

Cool-Breeze Tower Fan TF87 Series



Before using, please read the instruction manual and keep it for future use.




IMPORTANT SAFEGUARDS

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electrical shock and injury to persons, including the following:

- Read all instructions before using this fan.
- Before connecting the appliance, check if the voltage indicated at the bottom of the appliance corresponds to the local mains voltage before you connect the appliance.
- DO NOT operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or has been damaged in any manner. If the mains cord is damaged, contact your service provider immediately.
- Regularly check the main cord if it is still in good and safe condition.
- To protect against electrical hazards, DO NOT immerse cord, plugs, or the appliance itself in the water or other liquid.
- To avoid circuit overload, do not operate another high voltage appliance on the same circuit.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- DO NOT let cord touch hot surfaces.
- Turn the switch OFF before connecting or disconnecting plug from power outlet.

- Unplug from outlet when not in use and before cleaning.
- Appliance should always be used on stable and flat surface.
- This fan must NOT be used in potentially dangerous locations such as flammable, explosive, chemical-laden or wet atmospheres where gasoline, paint or flammable liquids are used or stored.
- Close supervision is necessary when the appliance is used and near children.
- This appliance is not intended to be used by persons (including children) with reduced physical, sensory and mental capabilities. This appliance is not for persons with lack of experience and knowledge, unless they have been given supervision or instructions concerning the use of the appliance by a person responsible for their safety.
- Never insert or allow fingers or objects to enter grill openings while the fan is operating.
- DO NOT block, cover or obstruct air flow to or from the fan while in operation.
- DO NOT use this fan in a window. Rain may create an electrical hazard.
- Do not use outdoors or for purposes other than intended use.

TOWER FAN PARTS AND FEATURES

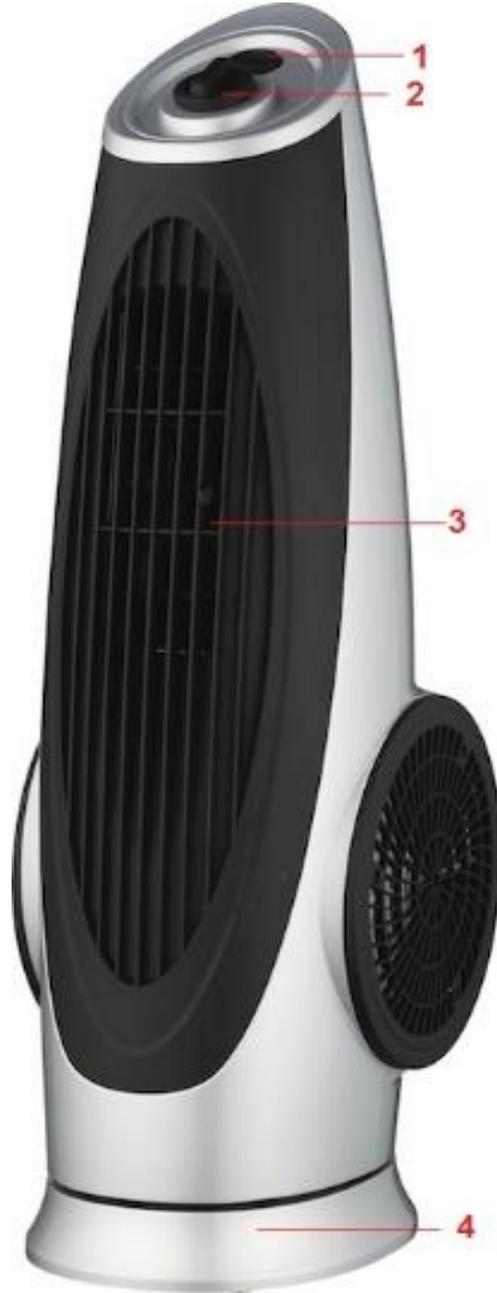

- 1) POWER BUTTON – Press to turn the fan ON or OFF
- 2) ROTARY SPEED SWITCH – Rotate to set the desired air speed

- 3) OSCILLATING FAN – Brings freshness and comfort by producing cool breeze, and swings from side to side
- 4) BASE – Provides safety by balancing the appliance



USING THE TOWER FAN

1. Carefully remove the fan from the plastic bag and carton.
2. Place the device on a flat surface.
3. Plug the fan to a power source according to what is written on the rating label.
4. Turn the fan "ON" by pressing the Power button.
5. With the fan ON, rotate the speed knob and choose the desired air speed.
6. After use, turn the fan "OFF" by pressing the Power button.
7. Unplug from the power outlet.



POWER
BUTTON

ROTARY
SPEED
SWITCH



TOWER FAN CARE & MAINTENANCE

- Always unplug the cord before moving or cleaning.
- Never place the fan in or near water.
- Never attempt to take apart the fan.
- Clean the body of the fan with a soft cloth (cloth not included).
- Never use alcohol or solvents such as gasoline, benzene, paint thinner, or other harsh cleaners.
- This fan must NOT be used in potentially dangerous locations such as flammable, explosive, chemical-laden or wet atmospheres where gasoline, paint or flammable liquids are used or stored.
- DO NOT use this fan in a window. Rain may create an electrical hazard.



ELECTRICAL REQUIREMENTS

Voltage: 120V

Hertz: 60Hz

Power: 100W



WARRANTY

Register your product within 30 days of purchase to activate its one-year limited manufacturer's warranty at [ovente.com/register](https://www.ovente.com/register)

LIMITED ONE (1) YEAR WARRANTY

Your product has a one (1) year warranty period from the date of purchase from an authorized retailer. This warranty only covers defects in workmanship and materials. The warranty does not include damage due to abuse, misuse, commercial use, accidents or natural wear and tear. In case of replacement, shipping and handling fee may apply.

LIMITATIONS

The warranty stated above is the only warranty applicable to this product. Other expressed or implied warranties are hereby disclaimed. No verbal or written information given by the Manufacturer, its agents or employees shall create a guarantee or in any way increase the scope and duration of this warranty. Repair or replacement as provided under this warranty is the exclusive remedy of the consumer. The manufacturer shall not be liable for incidental or consequential damages resulting from the use of this product. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the applicable warranty period set forth above except to the extent prohibited by law. Proof of purchase may be required to validate the order. Promotional items may not be covered under any warranty. Consumer rights may vary from state to state.

**Customer Support: [ovente.com/support](https://www.ovente.com/support)
Visit us at [ovente.com](https://www.ovente.com)**



[Facebook.com/ovente](https://www.facebook.com/ovente)



[@OventeTweets](https://twitter.com/OventeTweets)



[@Ovente](https://www.instagram.com/Ovente)



[youtube.com/ovente](https://www.youtube.com/ovente)