



WARRANTY

Register your product within 30 days of purchase to activate its one-year limited manufacturer's warranty at [ovente.com/register](https://www.ovente.com/register)

WARRANTY IS ONLY VALID IF YOU REGISTERED WITHIN 30 DAYS AFTER PURCHASE.

LIMITED ONE (1) YEAR WARRANTY

Your product has a one (1) year warranty period from the date of purchase from an authorized retailer. In the event that the product is defective, feel free to contact us to arrange for a replacement. This warranty only covers defects in workmanship and materials. The warranty does not include damage due to abuse or misuse, any commercial use or accidents.

LIMITATIONS

The warranty stated above is the only warranty applicable to this product. Other expressed or implied warranties are hereby disclaimed. No verbal or written information given by the Manufacturer, its agents or employees shall create a guarantee or in any way increase the scope and duration of this warranty. Repair or replacement as provided under this warranty is the exclusive remedy of the consumer. The manufacturer shall not be liable for incidental or consequential damages resulting from the use of this product. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the applicable warranty period set forth above except to the extent prohibited by law. Consumer rights may vary from state to state.

**Customer Support: [ovente.com/support](https://www.ovente.com/support)
Visit us at [ovente.com](https://www.ovente.com)**



Facebook.com/ovente



@OventeTweets



@Ovente

OVENTE®

Cool Breeze Tower Fan

with Remote Control and LCD Panel

TF88 Series



Before using please read the instruction manual and keep it for future use.



IMPORTANT SAFEGUARDS

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electrical shock and injury to persons, including the following:

- **Read all instructions before using this Fan.**
- Make certain the power source conforms to the electrical requirements of the fan.
- Use this fan only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electrical shock, or injury to persons.
- To reduce the risk of personal injury and electric shock, the fan should not be played with or placed where small children can reach it.
- This fan must NOT be used in potentially dangerous locations such as flammable, explosive, chemical-laden or wet atmospheres where gasoline, paint or flammable liquids are used or stored.
- When the fan is not in use, unplug the power cord from the wall outlet. Power should be also turned off during cleaning, and while moving the fan around.
- BE CERTAIN that the power source for the fan is 120V AC.
- If an extension cord is needed, use an extension that have all the certificates and approval marks of your country regulations.
- DO NOT route power cord under rugs, carpets, runners or furniture. This may damage the cord or cause it to overheat creating a fire hazard.
- ALWAYS place the Fan on a stable, flat, level surface while in operation to prevent the fan from overturning.
- NEVER insert or allow fingers or objects to enter grill openings while fan is in operation or injury and/or damage to the fan may occur.

7. Timer: While the fan is on, press the timer with a maximum of 8hrs for automatic shut-off.

Timer function can be used in any speed and while the fan is in oscillation mode.



FAN MAINTENANCE

To reduce the risk of electrical shock and fire please observe the following instructions:

- Always unplug the cord before moving or cleaning.
- NEVER place the Fan in or near water.
- NEVER attempt to take apart the Fan.
- Clean the body of the Fan with a soft cloth only.
- NEVER use ALCOHOL or SOLVENTS such as gasoline, benzene, paint thinner, or other harsh cleaners.



ELECTRICAL REQUIREMENTS

Model	Voltage	Frequency	Wattage
TF88	120 VAC	60 Hz	100 W



USING THE FAN

1. Carefully remove the fan from the plastic bag and the carton.
2. Place the device on a flat surface.
3. Plug the fan to a power source according to what is written on the rating label.
4. Turn on the fan by pressing the Power Button ON the unit or the remote control.



5. **SPEED:** Each time the speed button is pressed, the speed will change, from Low, Medium to High.



6. **Oscillation:** With the fan on, press the Rotate to start and stop the oscillation function. The oscillation function can be used in any speed.



- NEVER insert or allow fingers or objects to enter grill openings while fan is in operation or injury and/or damage to the fan may occur.
- DO NOT block, cover or obstruct air flow to or from the fan while in operation.
- Do not immerse the fan into the water or any other liquid.
- There should be no sharp objects or fingers through the vents while the fan is on.
- Do not operate the appliance unattended near children.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- NEVER use a single extension cord to operate more than one fan or other electrical device.
- DO NOT use this fan in a window. Rain may create an electrical hazard.
- DO NOT use this fan if it has been damaged or is not functioning properly.
- Do not attempt to open fan body part or repair the fan. In the case of disregarding this instruction, the company is not responsible for the repair of the damage.
- Do not use the fan if its power cable and/or plug is defective. Do not use the fan if it fell or other damaged. In this case, call your service provider as soon as possible.
- NEVER use fan outdoors.
- Remote controls for other appliances or electronic equipment can sometimes interfere with the operation of this fan. If this occurs, move the fan to another location.