



# OVENTE®

## 10L Electric Toaster Oven

### T05810 Series



Before using please read the instruction manual and keep it for future use.





## MAINTENANCE AND CLEANING

### Tray, Wire Rack & Crumb Tray

- Wash the tray, wire rack and crumb tray immediately after use in hot sudsy water to prevent grease accumulation.
- Use a clean soft cloth and warm soapy water to clean the body of the toaster oven
- Wipe dry with a soft cloth.

### To Clean Inside

- If oil splatter cannot be removed, use a clean soft cloth with soapy water. Dry the inside thoroughly. Carefully clean the heater tube but ensure it is cold first.
- Empty crumb tray regularly but ensure that it is not hot.



## ELECTRICAL REQUIREMENTS

**Voltage:** 120V

**Power:** 800W

**Hertz:** 60Hz





## Timer

The timer has 2 control dial that also acts as the oven's ON and OFF switch.

- Turn the timer clockwise to select the appropriate cooking time up to 30 minutes.
- When cooking time is complete, a signal will sound and the unit will turn off automatically.
- Different types of food heating time may vary depending on personal preference.
- When oven is in operation, and you want to remove the food before the timer is completed- turn timer knob to the "0" position before taking the food out.
- After using, switch off the electricity supply and unplug from the wall outlet.

## Cooking Mode Selector Knob

Use the cooking mode selector knob "1" to choose your required heat setting – either both elements together, or the upper element only or lower element only.

-  — Both elements are off
-  — Upper element is on
-  — Lower elements are on
-  — Both elements are on

**Both elements are off:** no power

**Upper element is ON:** Upper heating element works power is at 400W.


**Lower element is ON:** Lower heating element works power is at 400W.

**Both elements are ON:** Upper and lower heating elements are working power is at 800W.




## IMPORTANT SAFETY NOTES

**When using your toaster oven, basic safety precautions should always be followed, including the following:**

- Please keep the instruction manual, guarantee certificate, the sales receipt and if possible, the carton with the inner packaging.
- Keep the toaster oven out of the reach of children. Do not leave children unsupervised.
- Do not use if there is any damage to the machine, power cord or plug.
- Never put the machine in water or let the power cord or plug get wet.
- Use protective gloves when removing the food tray as metal parts of the machine will be very hot-use (protective gloves not included).
- This machine is for domestic use only.
- The temperature of accessible surfaces may be high when the appliance is operating.
- To disconnect, turn the control OFF, then remove plug from wall outlet.
- Do not use the appliance for other than its intended use. Do not use outdoors.
- Before plugging in the appliance, check that the socket and power matched those of the appliance. Attention shall be paid to whether the rated value of input supply voltage is according to that of rated input value or not.
- This appliance should not be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have are supervised by the person who is responsible for their safety.
-  The center surface gets extremely hot; refrain from touching the appliance.
- Unplug the oven from the wall outlet, when not in use and before cleaning.
- Keep hands away from the appliance body, during use – high temperatures may be present.

- Do not immerse the appliance, power cord or plug in liquid.
- Operate the appliance on a flat, clean surface. Keep away from any flammable materials.
- Do not operate near other heating appliances.
- Close supervision is required when any appliance is used by or near children.
- Do not allow food to contact the heating tube, to prevent burning.
- Do not allow cold objects to touch the glass is hot to prevent breakage.
- The crumb tray must only be removed and emptied when the oven is cold, to prevent burns.

## TOASTER OVEN PARTS

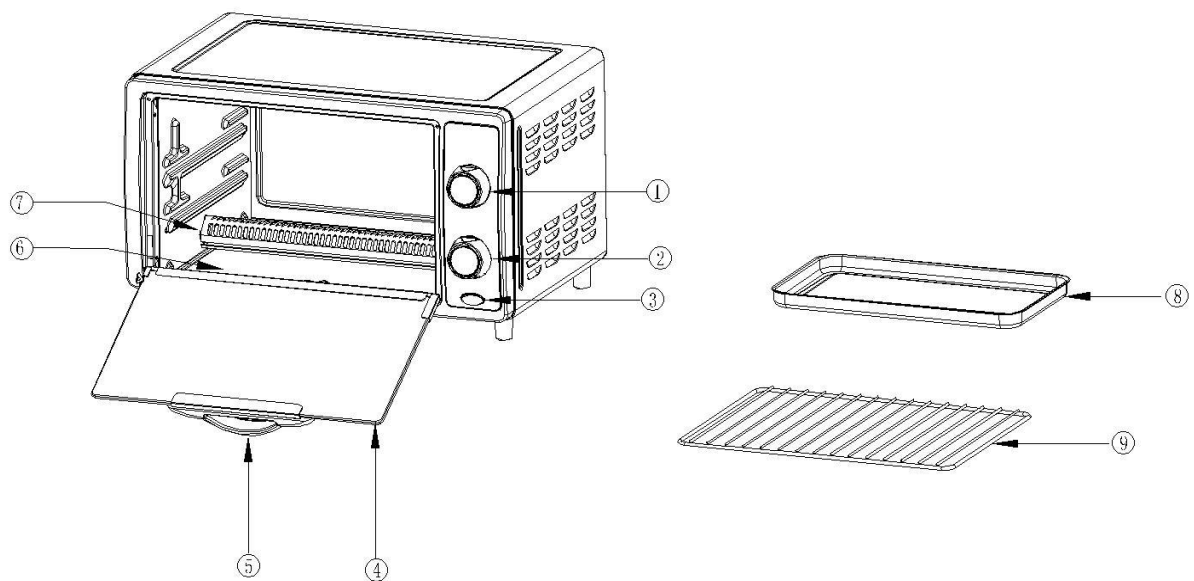

1. Cooking Mode Selector Knob

4. Glass Door

7. Heating Element

2. Timer Control Knob

5. Door Handle

8. Tray


3. Power Light Indicator

6. Crumb Tray

9. Wire Rack

## BEFORE USING THE TOASTER OVEN

- Pre-heat the oven for 3 to 5 minutes to cook perfectly.
- Sometimes during the first use, some smoke and burning smell may occur, this is normal and will stop once operating temperature is achieved.
- To use the crumb tray (see picture below).

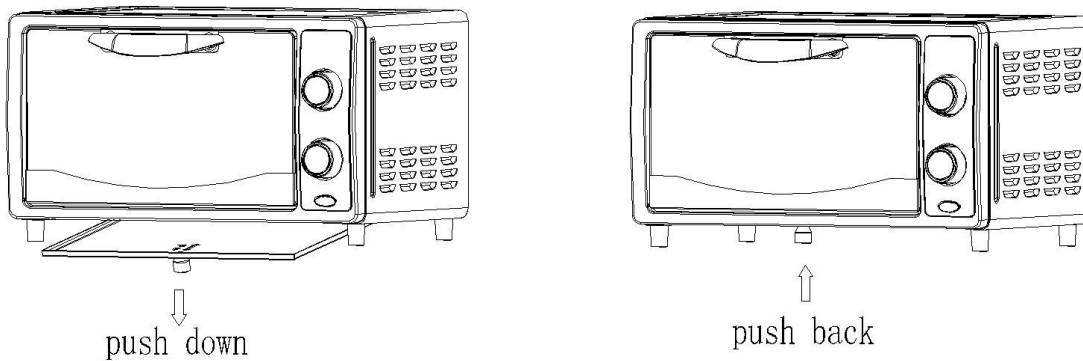

## USING THE TOASTER OVEN

1. Place food in the oven on the metal tray. Non-oily foods can be placed directly on the tray. Oily foods must be wrapped with an aluminum foil.
2. Oil spills on the tray will be burnt, causing smoke and a tarnished tray.